



elmeg CS410
elmeg CS410-U
elmeg CS400xt
elmeg IP-S400

Operating instructions
English

elmeg
by **funkwerk** 

Declaration of conformity and CE mark



This device meets the requirements of the following EC directive R&TTE 1999/5/EG:

»Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity«.

You can also request this EC declaration of conformity at the following Internet URL: <http://www.funkwerk-ec.com>.



The waste container symbol with the "X" through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.

© 2009 Funkwerk Enterprise Communications GmbH - All rights reserved.

Reprinting of this document, even excerpts, is permitted only with the express consent of the publisher and with precise source information, regardless of the media used (mechanical or electronic).

Function descriptions included in this documentation which refer to software products of other manufacturers are based on the software used and valid at the date the documentation was prepared or published. The product and company names used in this documentation may be protected by trademarks.

Contents

Description and installation	1
System-telephone extension modules	3
Safety notes.	3
Connecting the telephone to a PC	7
elmeg IP-S400 at the Ethernet-port	8
.	9
Changing the label	10
Pictographs	10
Setting the display language.	11
Telephone display and buttons	11
Making Calls	15
Starting a call	15
Accepting / rejecting a call.	16
Call Deflection	17
No number transmission (anonymous call).	17
Starting a call with a fixed extension number (MSN)	17
Redialing	17
Microphone activation/deactivation, open listening and hands-free calling.	19
Headset use	20
Announcement	20
Intercom.	21
Automatic completion of call	21
Parking a call (not with IP-S400)	22
Tracing (MCID)(only via ISDN cord)	23
Keypad and tone frequency dialing (DTMF dialing)	23
Conducting calls with several subscribers	24
Call waiting	24
Inquiry Call	24
Call switching.	24
Broker's call.	25
Three-party conference	25
Telephone operation	26
Telephone directory	26
VIP-Memory	28
Caller- and Memo list	29
SMS and UUS1 text messages	32
Silent signalling.	37

Monitoring costs	37
Viewing and deleting costs	38
Setting the tariff factor and the currency	39
Programming a charge limit for an extension number.	39
Enabling or inhibiting an extension number (MSN) for outgoing calls	39
Communication and charge displays.	40
System telephony.	42
Function keys.	42
System menu at a pabx with system telephony	47
Configuring and setting up the system telephone.	48
Extended configuration	48
Acoustic	49
Settings	53
Configuration.	60
Display.	62
Setting up the IP-S400	66
Programming numbers	70
Service	73
Telephone and PC	78
CTI / TAPI using the phone's USB port	78
CAPI using the telephone's USB port	78
Audio applications using the phone's audio jacks	78
Contents of the WIN-Tools CD-ROM	79
Installing the programs from CD-ROM	80
Default telephone settings.	81
Menu of the Telephone	83
Technical specifications	87
Index.	89
Brief description of functions	97

Description and installation

You can connect the system telephone at the internal S0, Up0 or Ethernet connection of a pabx system. The telephone provides system features when connected to certain elmeg PABX systems. For example:

- Dialing from the pabx telephone directory
- Sending and receiving SMS messages
- Messaging and intercom calls with other system telephones connected to the pabx.
- Function keys for controlling special PABX features (switching call modes, team log-in/off, line buttons, extension buttons).
The status of the programmed features can be displayed by means of LEDs assigned to the specific function keys.
- Accessing the PABX system menu. This menu provides further pabx features.


The internal connection of the PABX systems automatically interfaces with the system telephone. Please refer to the operating instructions of your PABX to determine whether these typical system features are provided with the various system telephones.

CS400 / CS400xt

This system telephone is delivered with a key extension module (T400/2), providing you with 10 additional, freely configurable keys.

It is designed for connection to an internal S0 port (4-wire cable) of a PABX system. The system telephone is not equipped with a USB or serial port for configuration or other uses. This phone must be configured via the internal ISDN port using the WinTools Professional Configurator. There are also no »Audio functions« implemented and you can not use the Answering machine or Up0 modules or functions. None of the functions for this module are shown in the display, nor can they be used.

This telephone is equipped with the function »Emergency operation«. »Off« = Emergency operation off, »On« = Emergency operation On. meaning it can be operated at NT via the PABX system on a loss of 230 V~ power. If more than one telephone is connected to the ISDN system, the emergency operation function may only be configured on one of the ISDN system telephones. All calls are signaled at this phone. The volume of the ringing tone is set to low.

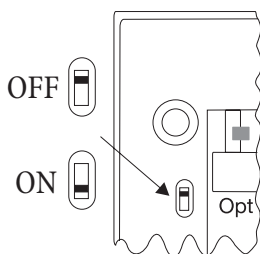

In addition to making normal calls, the following functions are also available:

- Selection of a call number from the telephone directory or the speed dial memory after lifting the handset.
- Display of call duration and costs.
- Mute.
- Terminate call.

The phone number (MSN) that the network service provider assigned to you as the first (master) number will be transmitted to external subscribers. Charge billing is effected for this. Observe the information concerning emergency operation in the PABX system. Ongoing connections are interrupted in the event of a power failure.

Information:

Refer to the operating manual of your PABX system to see if your system supports emergency operation.

Configuring emergency operation (PtMP and PtP connections)

Emergency operation is not configured as a factory default feature. A slide switch is located on the bottom of the system telephone that can be used for configuring emergency operation.

To configure the emergency operation feature, slide the switch on the left side on the bottom of the phone down. To de-activate emergency operation, slide the switch back to the top position.

Information:

Attention: Before you move the emergency operation switch unplug the ISDN connector for the system telephone. Use a non-metallic tool to move the switch.

Configuring emergency operation at a point-to-point (PtP) connection

If you wish to also use your system telephone for emergency operation at a PtP connection you must also activate this feature using the PC configuration for your system telephone. You can use the configuration program to set emergency operation at a PtP connection.

Making calls during emergency operation at a point-to-multipoint connection

The system telephone begins emergency operation when power supply for the PABX system and the NT is lost. Emergency operation, followed by a telephone symbol is then shown in the system telephone display.

If the 230 V AC power supply is restored during an ongoing call, all normal, configured functions are available again only after you hang up the handset. If the 230V~ power supply is restored when the handset is in the cradle, the emergency operation display is replaced by the normal display when the handset is lifted, or on the next call.

Making calls at emergency power supply mode on a point-to-point connection

During emergency power supply mode at a point-to-point connection, you will see the normal operation displays.

CS410

This system telephone is designed for connection to an internal S0-port (4 wires) of an pabx system. If you wish to connect the telephone to an internal Up0-port, be sure to install the internal Up0/S0-module into the telephone or use the external Up0/S0-converter.

CS410-U

This system telephone is designed for connection to an internal Up0-port (2 wires) of an pabx system. The internal Up0/S0-module or the external Up0/S0-converter is then no longer required.

elmeg IP-S400

Connect this system telephone to the corresponding LAN port (or network) of the PABX system using a Cat. 5 cable. The system telephone is equipped with a PC output that can be used to connect other IP terminal devices.

Setting up/ Configuring the system telephone (CS410, CS410-U, CS400xt)

On the system telephone itself you can only carry out a limited configuration of the supported features. A full configuration is only possible with an elmeg telephone system using the professional WIN tool configurator via the corresponding system telephone interface.

elmeg IP-S400

Connect this system telephone to the corresponding LAN port (or network) of the PABX system using a Cat. 5 cable. The system telephone is equipped with a PC output that can be used to connect other IP terminal devices. Power supplied via plug-in power supply unit, or via Ethernet PoE (Power over Ethernet).

Information:

You will find additional information on the configuring of the system telephones in the detailed instruction manual on the CD-ROM.

System-telephone extension modules

Up0/S0-module (CS410 only)

- Install the Up0/S0-module into your telephone if you wish to connect the phone to a Up0-port of a pabx. The external Up0/S0-converter is then no longer required.

Answering machine module (only CS410, CS410-U)

- This module provides your telephone with a multi-function digital answering machine. FOR EXAMPLE.: Separate programming for each MSN extension number, time-control feature for voice announcement related to specific MSN extension numbers, automatic notification with newly recorded calls, recording of dictations, logging of calls, remote polling protected by PIN. A special key and LED are provided for operation of the answering machine.

Additional »T400« keyboard

- This additional keypad has 20 buttons with an inset LED, which can be used on two levels as function buttons. The LED is assigned to the first level. Another two LEDs are provided for indicating additional information. Up to three additional keypads can be connected (cascaded) to your telephone. A plug-in power supply is required if you use more than one additional keypad. Use only the approved T400 power supply units available as accessory / serial number 220872.5 or T400-UK / serial number 220873.3.

Additional »T400/2« keyboard

- This additional keypad has 10 buttons with an inset LED, which can be used on two levels as function buttons. The LED is assigned to the first level. Another two LEDs are provided for indicating additional information.

Safety notes

- Mind the storage and operation temperatures for the device listed in the technical specifications. Only connect the device when the permissible ambient operating temperature has been reached.
- Please note that condensation on or in the unit may occur when moving from cold to warm surroundings. Only remove the telephone from the package when the permissible ambient operating temperature has been reached.
- You should not make calls or connect or disconnect any lines during thunderstorms.
- Only attach the connecting cords at the connections provided.
- Make sure phone cables are installed in a safe manner to prevent tripping.
- Avoid the following:
 - Direct sunlight
 - Sources of heat (for example radiators)
 - Electronic devices (for example stereo components, office equipment or microwave devices)
 - Ingress of moisture or liquids
 - Aggressive fluids or vapors
 - Dusty environment
- Do not use the unit in excessively humid rooms or hazardous locations.
- Only open those sections of the device specified in the assembly / operating instructions.
- Do not touch plug connectors with pointed, metal, or moist objects.
- If you do not permanently mount the device or any accessories, be sure to place it/them on a non-slip surface.
- When required, clean the unit with a slightly moistened cloth.

- Only use approved accessories.
- Only terminals with SELV and/or which comply with ETS 300047 may be connected to the unit. This regulation is fulfilled when approved terminal devices are used as intended.

Plug-in power supply

- Use only approved power plug-in units (DSA-0101F-05 UP or L15 D52 AB DDLAWO).
- Do not use power plug-in units with visible defects or damage (fissures, cracks, etc.)

Elektrostatic charges (protection against electrostatic charges)

The telephone is supplied with enhanced ESD protection against the effects of electrostatic discharge that exceeds the protection level cited in the approval specification. Elevated ESD levels should nevertheless be avoided to the greatest possible extent. In some cases, electrostatic discharge levels can far exceed the approval limits or the resistance levels already implemented in your telephones. Eliminate the causes or conditions that promote these elevated ESD levels, such as insufficient humidity or carpeting. The telephone manufacturer does not assume any liability for damage caused under such circumstances.

Unpacking and placing the telephone

Unpacking

- System telephone
- Handset with handset connecting cord
- 2 feet
- 1 ISDN connecting cord, approx. 6 m (not with IP-S400)
- Cat.5 connecting cord, approx. 2 m (only with IP-S400)
- PC-Connection cable / USB cord , approx. 3 m (not with CS400 and IP-S400)
- PC-audio cable, 3.5 mm stereo jack, approx. 2,5 m long (not with CS400 and IP-S400)
- Adapter cord for headset with a 4 pin connecting cord (8pin/4 pin)
- Cable holder (self-adhesive after removing the film) (not with CS400)
- Operating instructions and labels for function keys
Supplement with telephone safety instructions
- WIN-Tools CD-ROM with:
Professional Configurator, telephone directory-, download- and sound manager,
TAPI-, USB-, CAPI- and NDISWAN driver, Adobe Acrobat Reader,
Operating instructions and Adobe Acrobat file for the printing of individual labels

Placing the telephone

Before installing the telephone you must mount the rear feet for the telephone at the positions (6) shown in figure 1. Please note that the feet of your telephone may leave marks on sensitive surfaces, such as furniture. The manufacturer of the telephone is not liable for any such damage. Therefore, use appropriate non-skidding pads under the phone.

Cleaning the telephone

The ISDN system telephone has been manufactured for normal, everyday use. When required, clean the ISDN system telephone with a slightly moistened cloth, or with an anti-static cloth. Never use a solvent to clean the phone! Never use a dry cloth; electrostatic charges could damage the electronics in the system. It is essential that no liquids penetrate into the inside of the ISDN system telephone, as this could destroy the phone.

Connecting the telephone (connecting and handset cords)

Please connect the ISDN cable and the handset cable. Otherwise you will not be able to operate the phone.

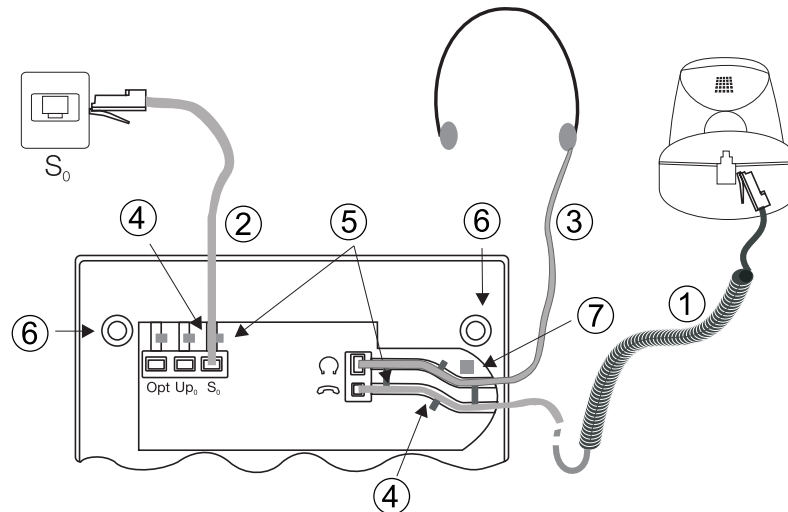


Figure: 1

Connecting the handset connecting cord

Connect the handset cord ① as shown in figure 1. Lay the handset cord in the cord groove ④ and lock it below the two cord retainers ⑤.

Connecting the connecting cord

Connection to the S0 (CS410, CS400)

Connect the ISDN cord ② as shown in figure 1 (S0-connector). Ensure that the longer ISDN connector is plugged into the ISDN jack and the shorter ISDN connector into the ISDN socket on the telephone. Then lay the ISDN cord in the cord groove ④ and lock it below the two cord retainers ⑤.

Connection to the Up0 (CS400, CS410 with Up410/S0-module or CS0-U)

Connect the ISDN cable ① as shown in figure 4 (Up0-socket). Ensure that the longer ISDN connector is plugged into the ISDN jack and the shorter ISDN connector into the ISDN socket on the telephone. Then lay the ISDN cord in the cord groove ② and lock it below the two cord retainers ③.

Information:

CS410 telephones equipped with a Up0/S0 module or CS410-U phones may not be connected through the S0-socket to an ISDN connection (e.g. internal ISDN port of the PABX).

Important notes for connecting the telephone to the Up0

- You can connect a further ISDN device with an S0- port (for example an ISDN card or a another telephone) at the S0 jack of the telephone. For each additional ISDN device this connection provides a power of 1 watt.

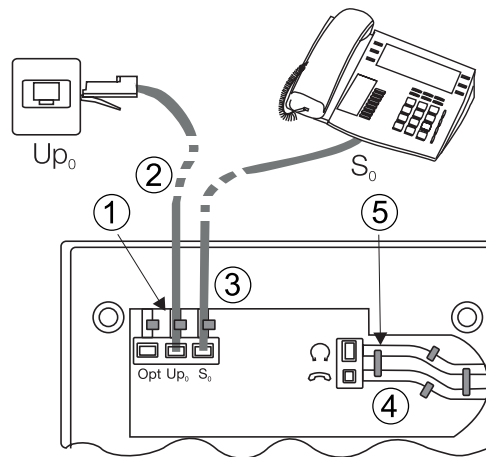


Figure: 4

Connecting and configuring a headset (not included in the scope of supply)

You can connect a headset to your telephone. Ask your dealer which headset models can be used or retrieve the required information from the Internet.

The telephone is equipped with an 8-pin socket for connecting a headset. Headsets with a DSHG-interface (e. g. cordless DECT-headsets) can be connected to the telephone right away. Special accessories are not required for this. For the connection of standard headsets (connection cable of 4 pins, e.g. U10PS) use the supplied adapter cord.

Information:


You can connect / install the optional Answering Machine module and a headset with a DSHG port simultaneously to/in a CS410-U system.

Connecting a headset

Connect the headset as shown in figure 1 on page 5 to the telephone's dedicated headset socket. Then lay the headset cord ③ in the cord groove ④ and lock it below the cord retainers ⑤.

If the headset cord does not fit in the cord guide, attach the self-adhesive cord holder supplied with the system to the bottom of your telephone ⑦. Then, route the headset cord under the cord holder.

Assignment of the headset jack pins (CS410 / CS410-U)

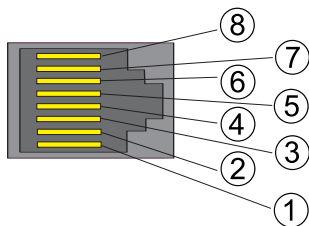

- ⑧ transmitter
- ⑦ V+ (3.3V)
- ⑥ Microphone - (Ground)
- ⑤ Handset (3.3 V switchable via resistor)
- ④ Handset (ground)
- ③ Microphone +
- ② Ground
- ① receiver

Figure: 3

Assignment of the headset jack pins (CS400 / CS400 /CS400xt)

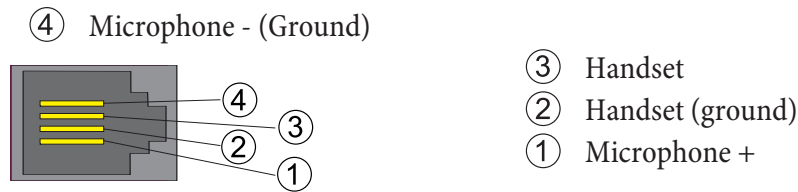


Figure: 4

Further settings when using a headset

You can use the handset or the headset for making calls. With headset operation, the following settings are required or possible:

- When configuring your telephone, program one of the function keys for headset operation (headset button, see page 44).
- You can use the headset connected to your system automatically for certain actions on the phone (see page 57).
- If a special support feature is stored in your telephone for the headset you are using, set your phone for that headset model (see page 48).
For example, the LED in the microphone extension for »Firefly F142 N« from Plantronics can be activated by the telephone.
- If you would like to use the auto-answer feature with your headset, set the time after which a call is answered (see page 57). When configuring your telephone, you should program a function key to be used for activating or deactivating the auto-answer feature.
- If you have configured your phone for automatic headset use, you can poll the answering machine using the headset.

Connecting the telephone to a PC

Connecting the PC connection cable (USB)

Information:

Use the USB cord supplied with the system to connect the telephone to the PC, or to the hub. If you use a different USB cord, ensure that the distance between the telephone and the PC, or between the telephone and the hub, does not exceed five meters, depending on the type of cord you are using.

Connect the USB cord ④ as shown in figure 5 (PC-socket). Plug the USB connector (type A) into the corresponding socket of your PC and the USB connector (type B) into the USB socket on the back of the telephone ①. The telephone is automatically detected by the PC, provided that both devices (telephone and PC) are switched on.

Information:

Installation of a device driver is started automatically the first time you connect the telephone to the PC. Insert the WIN-Tools CD-ROM supplied with the telephone and follow the instructions displayed on the screen.

You will need a hub (USB distributor) if you plan to use several USB terminal devices at your PC. Connect the hub to the USB port of the PC. You can then connect other USB terminal devices, including the telephone to the hub.

CS 410, CS 410-U connecting the audio cable (Audio in / Audio Out)

The telephone is equipped with an input ② and an output ③ for audio signals. Both these ports have a 3.5 mm stereo socket. When using the optional answering machine module, you can connect the telephone via these ports to the PC sound card in order to upload announcements into the phone or save recorded messages on the PC.

You can also use specific telephone features with the Audio-Out output (see page 52). Connect the speakers ⑤ with a 3.5 mm stereo jack to the telephone's Audio-Out ③ output, as shown in figure 5.

IP-S400 Audio in / Audio out

The telephone is equipped with an input ② and an output ③ for audio signals. These ports are provided for headsets ⑥. The jacks are linked to the corresponding ports for the headset jacks on the bottom of the telephones.

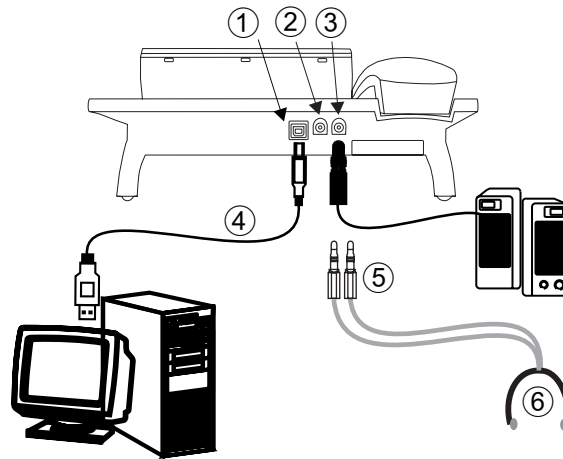


Figure: 5

elmeg IP-S400 at the Ethernet-port

The IP-S400 system phone can be powered through the Ethernet port as defined in IEEE Std 802.3af-2003 (PoE), with power being supplied via Ethernet from the hub or switch. At the port, »Alternative A« and »Alternative B«, as defined by IEEE Std 802.3af-2003, and »Power classification 1« (up to 4 W) is supported. The PoE port is not polarity sensitive.

PIN assignment for PoE

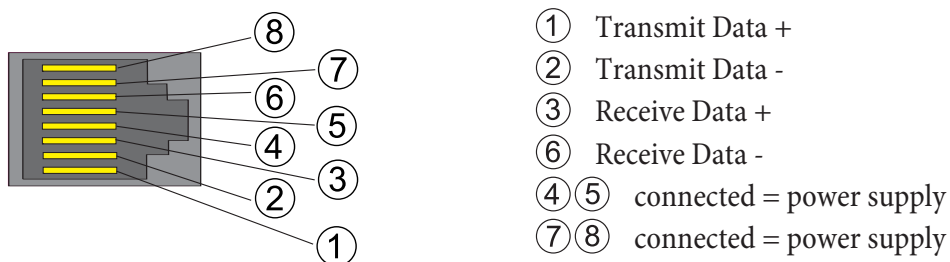


Figure: 6

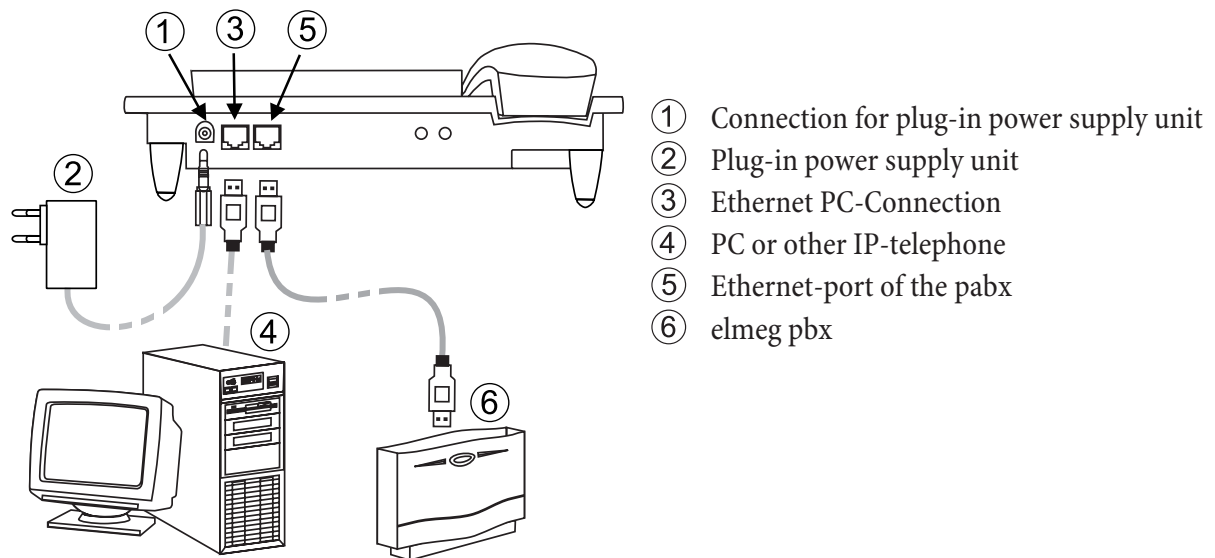


Figure: 7

Connecting to and operating the system telephone at the pabx system (basic function including DHCP)

Consult the installation instructions for the PABX system to determine which port can be used for connecting the IP-S400. Connect this port with the Ethernet PABX port on the system telephone.

- Configure your PABX system for use with IP system telephones.
- Define the MSNs for the IP system telephones within the PABX system.
- Switch on the power (plug-in power supply unit) to the IP system telephone and wait until the telephone has been initialized.

Once the IP system telephone has been initialized you will be requested to select the language in the display.

- Select the display language.
Press the buttons to view the available languages.

Which language?	
Italiano	Español
Deutsch	√English
Français	Nederlands

- Enter one of the MSNs that has been input to the PABX system (in the example shown here, 12).

Confirm your entry by pressing **OK**.


Programm dial number
MSN-1>12

If no PIN has been entered in the system configuration, press button **OK** and button **OK** again after being requested to do so.

IPS login PIN for sys server
MSN-1>


- Switch to Use DHCP.

Select »on« .

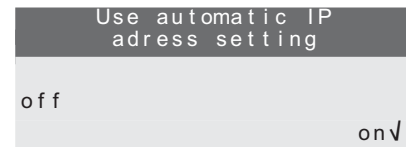

- The telephone and PABX system are synchronized.

Information:

If there is no connection to the PABX system (no LAN link, or the telephone has not been logged in), the symbol  / ---- / ----▶ « will be shown in the display instead of the time.

You can now use the IP system telephone at the ISDN or UP0 port.

You find a complete description of the configuration on page 68.

Changing the label

The label panels for the function keys are included on a separate sheet enclosed in the operating instructions. Cut out the label you wish to use.

To change the label panel, press the flexible cover together between your index finger and thumb and lift it out. The label panel can now be changed.

You can fill in the label for your telephone with your own information and then print it out using the Professional Configurator. Also available on the WIN-Tools CD-ROM is an Adobe Acrobat file containing templates that you can also fill in and print out.

Pictographs

The pictographs (symbols) described below have been used in these operating instructions to illustrate some procedures for setting and using the telephone.



Lift up the handset or start prepared dialing.



Replace handset. The telephone is idle.



A call is signaled. The ringer melody sounds.



You are conducting a call.



A three-party conference call is initiated.



You hear the positive or negative acknowledgement signal.



Select the call number, code, character or text.



This symbol prompts you to select a certain digit or character.



Press the appropriate button on the push-button set.




When you enter the number for dialing via an SIP provider, dialing is not performed until around 5 seconds after the last digit has been entered. Dialing is performed immediately when you press the # key after entering the number. In this case, the terminal device must also be capable of dialing into the phone system with the #.

Setting the display language

You can select the language of your display.

Begin as follows:

	Menu	Configuration	Display	Language
---	------	---------------	---------	----------

◀ ▶ Press the arrow buttons to view the available languages.

● Press the softkey adjacent to the desired language. The display switches to the changed language immediately.

Which language?	
Italiano	
	Español
Deutsch	
	English
Français	
	Nederlands

Telephone display and buttons


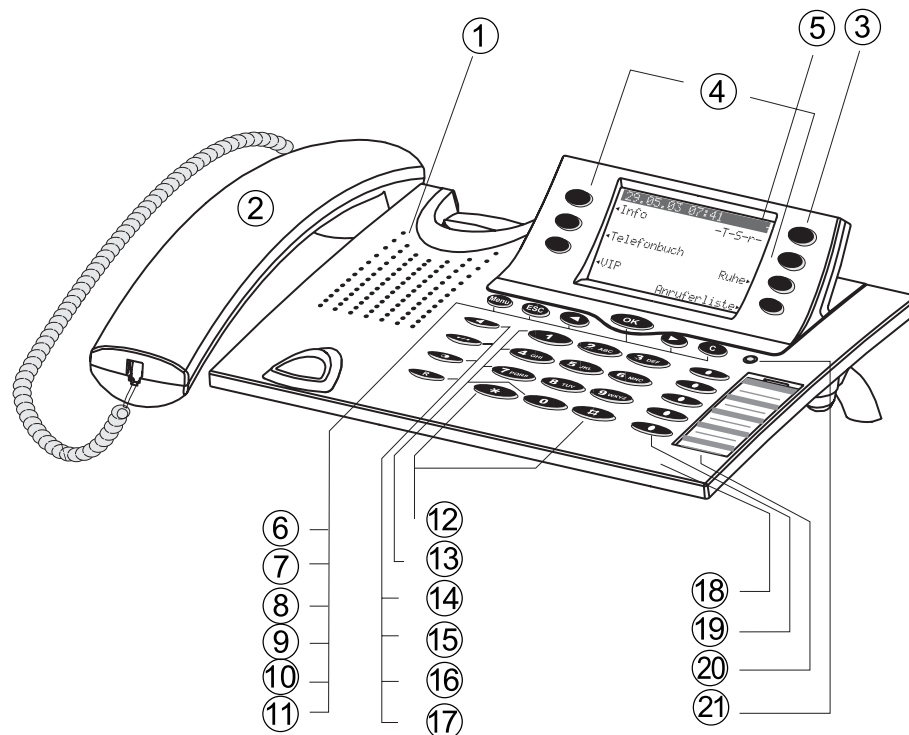


Figure: 8

- ① Speaker
- ② Handset with connecting cord
- ③ Answering machine button on the telephone (optional module). With the CS400, the pabx menu will be loaded.
- ④ 6 Softkeys
- ⑤ Seven-line backlit display
- ⑥ Menu key: This key opens the programming menu. If you are already located in a menu and then press the key, either menu-specific functions are shown, or you are moved back one programming step.
- ⑦ ESC key: Pressing the Esc button during programming returns the telephone to its idle status.
- ⑧ ⑩ »left« / »right« arrow buttons: The arrows »left« and »right« in the right corner on the top line of the display indicate that you can call up further functions on the lower lines using the arrow buttons.
- ⑨ OK button: Pressing this button confirms an entry or stores a setting in the telephone.

- ⑪ C key: Press this button to move back one menu step in the menu. If you are currently in the input mode, this button can be used to delete individual characters.
- ⑫ Asterisk key/ hash key
- ⑬ Dial buttons
- ⑭ Open listening / hands-free button
- ⑮ Ending a call
- ⑯ Redial button
- ⑰ Inquiriy button
- ⑱ Microphone
- ⑲ CS410 / CS410U / IP-S400: 5 Five programmable function keys with LED: Each button has an inset two-color LED (level 1 - red / level 2 - yellow). These LEDs can be used to indicate certain functions.
CS400xt: 5 programmable function keys with inset LED
Each button has an LED (red) assigned to it. These LEDs can be used to indicate certain functions.
The LEDs for the two function keys are dual-colored (Level 1 - red / Level 2 - yellow).
- ⑳ Label panel for function keys
- ㉑ Status-LED, Call signaling LED, received UUS and SMS messages and MWI (red) and answering machine (yellow). It is possible to configure the desired functional display for messages and calls.

Telephone display

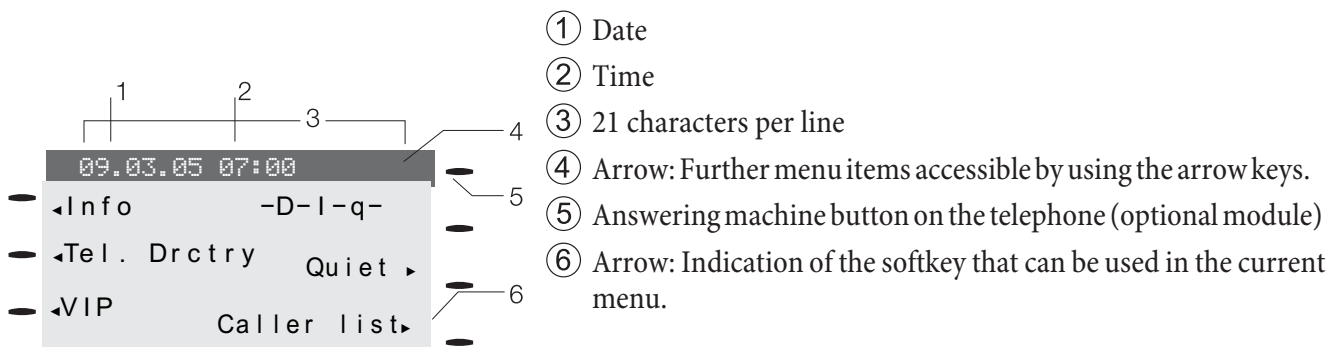

A checkmark »*« following a display text indicates that this feature is active.

The telephone is equipped with a seven-line backlit display. Backlighting is automatically switched on or off. After connecting the system to the internal ISDN connection of your PABX system, the date and the time are shown on the display. The date and time are imported automatically from the pabx system. The text displayed for a function is always located next to the corresponding softkey. When you press the softkey, the next level is displayed. If not all information fit into the screen, this will be indicated by »*« or »*«. To have the other characters displayed, press the R-button first and then the corresponding arrow button.

Various telephone display shots are illustrated in this operator's manual to help explain the different settings and use of the system. A wavy line at the top or bottom of an illustration indicates that not all of the 7 lines of that particular display are shown (only pertinent lines shown).

Special feature for displaying lists in the display

Several entries are shown in the display as a list for certain settings or when using the phone. These lists are required for telephone directory or VIP memory programmings for example.

- ◀ ▶ The active entry (the one you have selected) is highlighted. Use the menu or the OK button to display further features or select the highlighted entry.

```
VIP digit to select ← →
V0: 0123456
V1: TONY
V2:
```


Special feature for changing existing entries

You have various options available for changing existing entries (for example names or numbers).

Example 1:

You may want to change the telephone number of an entry, because that subscriber has moved to another place. When you use the push-button set to enter the first digit of the new number the existing number is deleted completely. Enter the other digits of the new number.

Example 2:

You wish to change parts of a name in a telephone directory listing, because the name has changed (e. g. in the case of marriage).

Use the arrow buttons to specify the storage position for that entry. You can overwrite an existing surname right away or delete it with the C-button and then enter the new name.

Key assignments for entering texts

The assignments for the keypad for entering letters, digits and special characters are as follows:

Button	Press						
Button	1	2	3	4	5	6	7
①	1						
② ABC	A	B	c	2	Ä	Å	Æ
③ DEF	D	E	F	3			
④ GHI	G	H	I	4			
⑤ JKL	J	K	L	5			
⑥ MNO	M	N	O	6	Ö	Ø	
⑦ PQRS	P	Q	R	S	7	ß	\$
⑧ TUV	T	U	V	8	Ü		
⑨ WXYZ	W	X	Y	Z	9	¥	
*	*						
#	#						

① Several special characters are assigned to the button »!«, »+«, »-«, »=«, »<«, »>«, »☒«, »\$«, . .

When you press the ① key the first time a space is inserted. When you press this key a second time several special characters are shown in the display. Press the appropriate key to select the corresponding special characters ① ... ⑨. If you wish to view further special characters, press the ① key.

Input mode for entering letters

You ha«.

»ABC« The next letter that you enter is shown as a capital, all others as small case letters.
Example: »Dean, James«.

»ABC« Every letter that you enter is shown as capitals.
Example: »Dean, James«.

Information:

When you start entering texts, the input mode is always »Abc«. Press the Recall flash button to change the input mode. To insert a character while in »Abc« mode, press the C key.

Call signaling

Call signaling is effected using the ringing tone that has been set for the dialed number (MSN) in each telephone.

If you are using the telephone at an internal ISDN connection of certain elmeg PABX systems, you can program special ringing melodies for internal and external calls.

Function keys and LEDs

You can program the five function keys on two levels with different functions via the PC configuration program for the telephone. Each key is equipped with an LED that is used to display the active function. Each color is assigned to a particular level for the function key. (level 1 - red / level 2 - yellow).

Press the key two times to reach the second level for the function keys. This must be done at a short interval.

LED call signaling and answering machine

flashes red: Incoming calls

lit yellow: Answering machine switched on

flashes yellow: New messages recorded by the answering machine

Acknowledgement signals

Entries or settings you make at your telephone are sometimes confirmed by acknowledgement signals.

Positive acknowledgement signal (1 long tone):

The positive acknowledgement signal indicates that your input has been accepted and stored by the telephone.

Negative acknowledgement signal (3 short beeps):

You will hear the negative acknowledgement signal when your input has not been accepted by the telephone, or when invalid input has been made.

Displays for programmed features

- When the telephone is in the idle state, additional information about functions that have been configured are shown on »Info« line of the display. In this example: »-t-S-R-«. Press the softkey »Info« if you wish to get more information about the configured functions.

```
29.05.06 07:21
Info          -T-S-r-
Tel. drctry
VIP          Idle
            Caller list
```

- If you have programmed several features, press the arrow buttons to view the various settings.

```
Inhibit/Menu access:
Guard for modification
```

Displays	Configured function
»D«	Active appointment reminder set.
»I«	Dialing control or Call filter active, Access to telephone menus is protected.
»q«	Function »Silent signalling« (notice tone only) active.
»Q«	Function »Silent signalling« (all calls) active. (All call signals are switched off)
»U«	Call forwarding active.
»i«	Informationen on programmed function keys FOR EXAMPLE.: Message enabled / inhibited.
»I«	Informationen through Messages (MWI) For example. auf Ihrer t-Netbox
»%«	Answering machine, time control, notification or remote operation (option module) active.

Making Calls

Starting a call

Dial number - no correction possible



Dial call number - correction possible



To change the number or to correct a wrong entry, select the wrong figure with the arrow buttons and press C to delete it. Now enter the correct number.

If you wish to conduct the call using the handset, just lift it up after dialing the number. Any time during a call you can switch back and forth between hands-free calling, speaker function and use of the handset.

After you have dialed the number you can also press the speakercall flash button to have the number dialed and to use hands-free calling.

If a call can not be put through (e. g. number is inhibited via the dial ranges control, or the account for the number/MSN is empty), a corresponding message will appear in the display. e.g.: »Inhibit. : dial number«, when the dialing filter is active.

When you lift the handset and there is still no connection set up, you can pick up a waiting call using the softkey »pick up« without replacing the handset again. You are notified of the call in advance by a brief message. When you configure a connection key or a macro key you can pick up a call immediately just by pressing that key.

Other options for dialing without lifting the handset

The option of dialing without lifting the handset and of correcting or adding to a number also exists during dialing:

- from the last number redialing memory (see page 17).
- from the caller/ memo list (see page 29).
- from the telephone directory (see page 26).
- from the VIP memory (see page 28).
- with the function keys (see page 53).
- via CTI (TAPI) features (see page 78).

If you are using one of these options, you can make further entries prior to initiating the call. You can define which number (MSN), if any, is to be transmitted to the party being called. You can use the Professional System-Configurator to set which function is to be assigned directly to the softkey »Telephone directory«: »Local« or »PABX«. You can reach the second function by pressing the R (Recall flash) key.


Dialing from the pabx telephone directory

When you use this telephone with a system telephony supporting pabx system, you can dial from the telephone directory of the pabx.



Dialing from the telephone directory


You can store up to 250 names and numbers in the telephone directory. To select a name, you can page through the directory using the arrow buttons, or enter the specific first letter(s) of the name using the push-button set.

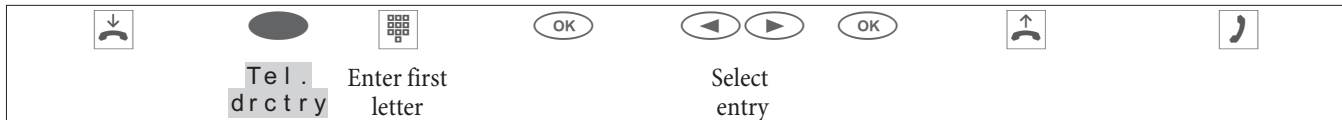

For information on how to program and configure the telephone directory, please refer to page 26 of these operating instructions.

Dialing from the VIP memory

You can program VIP numbers for each of the ten dial buttons 1 ... 0 including a name (20 characters max.) and a telephone number (26 digits max.).

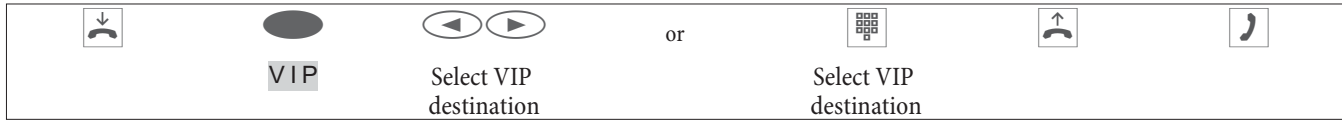

For information on how to program VIP entries, please refer to page 28 of these operating instructions.

Direct dial-in using function keys

Direct dialing is initiated using the direct dialing keys. Each of the five keys can be programmed with two functions or direct dialing numbers.



Use the function keys to select the desired number.

If you wish to dial a number from the second level, press the corresponding key two times. This must be executed at a short interval.

You can program the direct dialing / function keys via the PC configuration program for the telephone or during extended configuration.

from Dialing from the caller/memo list

The phone has a combined caller and memo list. A maximum of 30 entries (calls, memos, SMS messages or UUS1-messages) are stored in this list. Entries in the caller or memo list are indicated by the »Caller list« softkey.



For more information about the caller/memo list, please refer to page 29 of these operating instructions.

Accepting / rejecting a call

In its initial state the telephone will accept all calls, regardless of the selected MSN. If two calls are signaled simultaneously the first one is accepted when you lift up the handset. The second call can still be signaled a call waiting signal.

The telephone display shows the caller's number or the number the caller has dialed (MSN-1 ... MSN-10, or the assigned name).



If you are unable, or do not wish to accept a call, you have the option of rejecting this call. Press the »reject« softkey and the call will be no longer be signaled at your telephone.

If you are a member of a team, then this call will continue to be signaled at the phones of your team. If the call was signaled only at your phone, the caller will hear the busy signal when the call is rejected.



Call Deflection

If you are unable, or do not wish to accept a call, you have the option of forwarding this call. Press the softkey »transfer«, if you wish to forward this call directly to another subscriber. The call number of the forwarding target can be preset for each call number (msn) when configuring the telephone.

After pressing the »transfer« softkey, you can forward the call to the preset call number or enter a new call number.



No number transmission (anonymous call)


You can block the display of your telephone number at your caller's telephone if desired. You can set this function specifically for the next call, or permanently (see page 41).

Suppressing calling line identification for the next call

During an external or internal call, you can prevent the number from being transmitted (displayed) to the party you have called.



When a call is signaled, you can decide before accepting the call whether your number is to be transmitted to the caller. If your phone is the final destination of call rerouting you can use this procedure to prevent the caller from seeing the final destination phone number (i. e. yours).



Starting a call with a fixed extension number (MSN)

You can conduct an internal or external call such that a defined number (MSN) is transferred from your telephone to the party you are calling. This number must have been entered previously in your telephone. When you call, either number that is transmitted is shown in the second line of the display (»msn1... msn-10«) or the name that you have assigned to this number (MSN).

You can initiate dialing using the set extension number (MSN) as explained in the following, or you can use a programmed function key for this.

Information:
Use the WIN-Tools telephone directory manager to set up and configure an MSN extension number to be used for outgoing calls.



Redialing

The previously dialed call number is stored in the redial memory.



Extended last number redial

In the extended redialing function the telephone numbers of the last 20 calls, connections (calls) or text messages are stored. You can view these by pressing the redial button or the arrow buttons and subsequently have them redialed automatically.



The last dialed number is displayed. At the end of the second line the status of this entry is indicated by the letters displayed there.

- »V« Connection
- »F« Call
- »M« Mail (extension numbers, to which SMS or UUS1 messages were sent)
- »≡« Calls configured for automatic redialing.
- no entry You placed a call to somebody but did not reach him/her, or his/her line was busy.

Deleting a telephone number from extended redialing or save as a memo



Press the softkey below »delete?«, to delete the displayed entry immediately. Press the »Memo?« softkey to write the entry as a memo to the memo list. The entry will then be deleted from the memo list. The next telephone number is then displayed.

For an entry in the memo list, the softkey »Caller list« is shown on the display.


Importing numbers from extended redialing into the telephone directory

You can import a number that is present in the list for extended redialing into the telephone directory of your phone (see page 26).

Begin as follows:



- ☰ Enter the name.
- OK In this example: »DEAN«.
- Confirm your entry with OK.

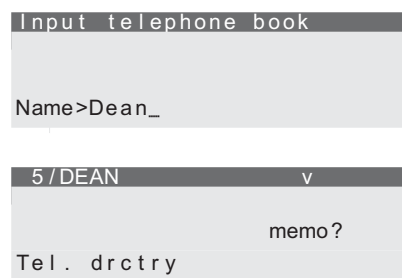

In the redialing function the name displays instead of the number.

Automatic redialing

If you placed a call to a subscriber whose number is busy or who does not answer, you can then activate automatic redialing which will call that same subscriber again after about 10 seconds.



After around 10 seconds the hands-free calling function of your phone is activated and the number is dialed automatically. This is repeated for up to around 2 minutes.

Up to 20 call attempts are made if the subscriber can still not be reached. After 20 unsuccessful attempts, automatic redialing will be cancelled. You will hear the negative acknowledgement signal in that case.

Information:

If automatic redialing is active, the »Autom. repeat request« softkey is shown on the display. Press the right arrow button or the »Continue« softkey, to return to the normal idle state display.

Suspending automatic redialing

You can suspend automatic redialing that you have started any time using the appropriate procedure and place a normal call. To suspend automatic redialing, press the open listening/hands-free button during automatic redialing.

After the call automatic redialing starts again.

Deactivating automatic redialing

You can deactivate automatic redialing at any time. There are no further call attempts.

To deactivate automatic redialing during the dialing process press ESC.


If you like to deactivate automatic redialing in the idle state of the phone, proceed as follows:



Microphone activation/deactivation, open listening and hands-free calling

Mute on/off

The mute function allows you to switch off the handset microphone during a normal call, or the telephone microphone during hands free calling. The subscriber you are calling will then no longer be able to hear the conversation you conduct with persons in the room (room inquiry). However, you will continue to be able to hear the party on the phone.




Information:

Call duration and cost logging are continued even if the microphone has been muted.

Speaker function

The "Open listening" function can be activated when there are other persons in the room who wish to also participate in the call. You continue to talk into the handset while this function is active. You can set the volume during the call as described on page 49.


Please inform the party you are calling that open listening is activated. »« indicates that open listening is activated.



When you hang up the handset while open listening is active, both open listening and the call itself are terminated.

Hands Free Calling

The handset remains in its cradle during hands free calling. The built-in microphone and the speaker are activated. Any actions are carried out using the open listening / hands-free button only. You can switch back to normal »handset« calls at any time during hands free calling by merely lifting up the handset. You can also switch from normal »handset« calling to hands free calling when you hang up the handset after pressing the open listening / hands-free button. During hands-free calling acoustic signals such as the call waiting signal are not transmitted. Please inform the party you are calling that hands-free calling is activated.»« shows that hands free calling is activated.



Headset use


You can connect a headset to your telephone. Connect and configure the headset as described on page 6. You can use the handset or the headset for making calls.

Activating and deactivating the headset

For headset operation, one of the functions buttons must be configured as a headset key. The LED assigned to this key indicates, whether the headset is switched on or off (LED on or off).



Activating and deactivating open listening while using the headset

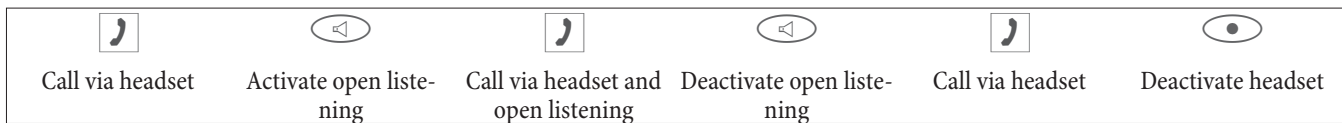

Announcement

The message function allows you to establish a connection to a different telephone, without this connection having to be actively accepted (picking up the handset, hands-free calling or loudspeaker). This is a simplex (one-way) call in which only the subscriber that initiated the message will be heard.

As soon as a telephone accepts the message, the connection is established. For a message call, enter the internal number of the party you wish to call. You also only need to enter the internal number with direct exchange line access. e.g. »22« instead of »*22«.

When a message comes in for your telephone, the number or the name of the party sending the message appears in the display. The message can be terminated at any time by pressing the ESC key.

Messages are accepted automatically by the phones being called by activating the open listening function when:

- the phone is idle.
- messaging has been enabled for the pabx (control by means of the »Enabling intercom« function key).
- the »Silent signalling« function is not activated.

Messages can also be received even if the »Station guarding« function is active when the »Enabling messages« function key has been programmed and is activated.

You can initiate a message using the procedure described below, or using a programmed function key. You can also initiate a message during an ongoing call (inquiry call) using the corresponding function key.

Information:
You can only utilize this function if the messaging feature has been enabled in the pabx for your MSN extension number.




Enter the telephone number, for which the message is to be given, or select an entry from the telephone directory.

Message to MSN-1

Tel. drctry



As soon as a telephone accepts the message, the connection is established.
Press the open listening/hands-free button to end a message.



Intercom

The intercom function allows you to establish an internal connection to another system telephone without the called system telephone having to accept the call actively (lift up handset, hands free calling/activate open listening). This is a call in which both parties can speak to one another.

As soon as the system telephone has accepted the intercom call, the connection is established. If one of the parties picks up the handset during an intercom call, the call becomes a standard type of call.

Information:

For an intercom call, enter the internal number of the party you wish to call. You also only need to enter the internal number with direct exchange line access. e.g. »22« instead of »*22«.

When an intercom call comes in for your system telephone, the number or the name of the calling party appears in the display. The intercom call can be terminated at any time by pressing the ESC key. Intercom calls are accepted automatically by activating the »Hands- free« feature when:

- the telephone is idle,
- the intercom feature has been enabled for the pabx (control by means of the »Enabling intercom« function key).
- the »Silent signalling« function is not activated.

Intercom calls can also be received even if the »Station guarding« function is active when the »Enable intercom calls« function key has been programmed and is activated.

You can initiate intercom calls using the following procedure, or using a programmed function key.


Information:

You can only utilize this function if the intercom feature for system telephones has been enabled in the pabx for your MSN extension number.


Begin as follows:



Enter the telephone number, for which the intercom function is to be activated, or select an entry from the telephone directory.

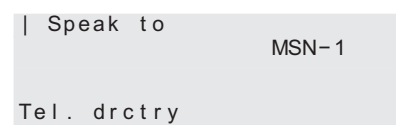

The connection is set up when the telephone has accepted the intercom function.
To end the intercom function, press the open listening/hands-free key.

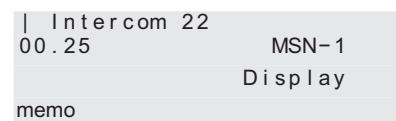

Automatic completion of call

Using the automatic completion of call to busy subscriber feature, you can reach a subscriber whose line is busy or who is not near his or her telephone. You are then notified that the subscriber for which recall has been configured can now be reached. You receive this information from the exchange office for external call-backs and from the PABX system for internal call-backs.

The telephone display then indicates »Autom. callback«. This display alternates every 2 seconds between the

number or name of the desired party. As soon as you accept this information (by picking up the handset, for example), the selected party is called automatically.


Automatic recall to busy subscriber (CCBS)

You hear the busy signal when calling the extension of the person you are trying to reach. »Completion of call to busy subscriber« allows you to call the extension as soon as the other subscriber hangs up his or her telephone.

Automatic completion of calls on no reply (CCNR)

When you call the desired number you always get a ringing signal, but the party is not near the phone or does not answer. Using the function »Completion of call on no reply« you can reach the party immediately when he/she ends a call, or lifts and then replaces his/her handset.

Programming completion of call to busy subscriber



The »C l b c k b u s y« softkey is only displayed, when automatic completion of calls are possible with the exchange office or with the pabx. The features »Recall to busy subscriber« or »Recall on no answer« must be applied for at your service provider for external call-backs.

You can configure three call-backs at a time. If you are using an LCR procedure (e. g. the LCR procedure of the phone), the »Completion of call to busy subscriber« function is carried out automatically via your standard network service provider.

Information:

If automatic redialing is active, the »C l b c k b u s y« softkey is shown on the display. Press the right arrow button or the »C o n t i n u e« softkey, to return to the normal idle state display.

Viewing and clearing call-back calls

When the phone is in idle, any call-back calls that are initiated can be viewed in the display by pressing the softkey »C l b c k b u s y«. Press this softkey to view the call-back calls. You can then view the individual completion calls using the arrow keys. If you wish to delete a call completion, select this call using the arrow key and then press the menu key, followed by the »d e l e t e ?« softkey.

All completions of call are automatically deleted after a predefined period. This time is set by the service provider for external call-backs and by the PABX system for internal call-backs.

Information:

If the ISDN telephone is disconnected from the ISDN network, (for example by unplugging the ISDN connector of the phone or by switching off or resetting the pabx), all requested call completions will be lost.

Parking a call (not with IP-S400)

The parking function allows you to interrupt a call for up to three minutes. You can then unplug the plug-in connector for your ISDN system telephone from the ISDN jack and plug it in in a different room. You can continue with the previous call after »unparking« it. Or you can »unpark« the call at a different phone and continue your call there.

Parking is only possible when only one connection is currently active with your telephone. After you unpark the call, the number for the parked subscriber will no longer be shown.

A »parking code« (0 . . . 99) is used to ensure that you are returned to the proper call when two calls are parked. The default parking code is 55.

Information:

If you park two calls on an ISDN bus this bus is then disabled for further calls. Unparking is possible only on the bus on which the call was also parked. Parking is only possible when only one connection is currently active with your telephone.


Park**Unparking****Tracing (MCID)(only via ISDN cord)**

If you receive a prank or malicious call, you can arrange for the number of the caller to be saved at the exchange. To enable this feature (Malicious call identification), it must first be applied for at your network service provider.

Information:

Identification of the caller is effected in the exchange and the number stored there with information on the number of the caller, the date and the time of the call.

You can use this feature in 2 situations.

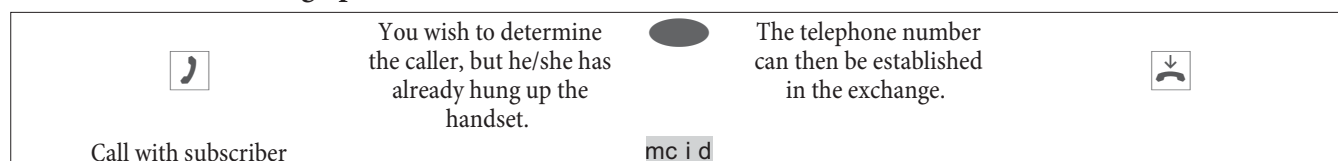Malicious call identification during ongoing call**After the caller has hung up the handset****Information:**

You can initiate tracing only in the course of an ongoing call when you are conducting hands-free calling using the telephone.

Keypad and tone frequency dialing (DTMF dialing)

During an ongoing call you can take advantage of other features using keypad sequences or DTMF dialing. In the telephone configuration program you can set whether recall flash buttonpad sequences or DTMF dialing is to be possible in the initial status of the telephone. The display indicates which other functions (keypad or DTMF) are possible.

»Keypad« softkey is displayed. DTMF sequences can be entered right away and keypad sequences only after you press this softkey.


»DTMF« softkey is displayed. keypad sequences can be entered right away and DTMF sequences only after you press this softkey.

Information:

Keypad and DTMF sequences can also be stored for function keys, which can then be used during a call.


Keypad

Using the Keypad function you can manage service or features in the PABX system or in the network of the service provider by entering character strings and digit sequences via the keypad. Ask your network service provider about this and consult the manual for your PABX to determine whether "Keypad" is supported.



Tone dialing (dtmf dialing)

Using tone frequency dialing, you can transmit multifrequency signals (DTMF signals) during an ongoing call in order, for example, to poll your answering machine or for using mail systems. If call waiting is active for an ongoing connection, tone frequency suffix dialing can not be utilized.



Conducting calls with several subscribers

Call waiting

If, during an ongoing call, a second call comes in for you, the second call is signaled when „Call waiting on“ is set (see page 55).




You can take a waiting caller, reject the call, or switch to a different subscriber. You can not transfer any calls if you already have four calls on your phone.

Information:
 You can take a waiting caller, reject the call, or switch to a different subscriber. You can not transfer any further calls if you already have four calls on your phone.

Inquiry Call


You have the option of establishing up to two other connections during an ongoing call using the inquiry call function. You can also use the MSN assignment key, a line key or an extension key to initiate an inquiry connection.



If you wish to set up further connections, proceed as described above. An active connection can be terminated by pressing the key for ending a call. You can return to the call that was previously put on hold. If there are no other calls on hold, a new connection can then be set up.

Transferring a call to a busy subscriber

This performance feature is possible when only one call is on hold. You would like to transfer a system-parked inquiry call to a busy subscriber.



The subscriber on hold will hear Music on Hold. As soon as subscriber 2 hangs up, he/she will be recalled by subscriber 1.

Call switching

When a call is transferred, the active subscriber and the subscriber for the connection previously put on hold are always connected with one another.

You can initiate an inquiry call yourself (e.g. in order to announce the call) and can then transfer the call.



Information:
 Please note that the feature (ECT - Explicit Call Transfer) must be supported by the PABX system when transferring two (2) external calls, or, when you use your phone directly on the network termination unit, by your network service provider.

Broker's call

If you have more than one connection active at your telephone (call waiting or inquiry call) (max. of four connections), you can talk to these parties alternately (Broker's call). For this, there are up to four softkeys available, depending on the number of connections on hold (»conn1«,... »conn4«). If the number or the name of the other party is known, the associated name or number is shown in the display instead of the text »Connection«.



If you have configured extension and line keys you can also carry out Broker's calls between different callers using these keys.


To terminate an active connection, press the disconnect key. You are then returned to the call that was previously put on hold.

You have the option of configuring up to four »Connection keys« in addition to the softkeys for the system telephone or the additional keypad. In connection with the associated LEDs, these keys show the communication status (no connection, ongoing connection, call status).

Three-party conference

If you have an active connection and a connection on hold at your system telephone, you can initiate a conference call with these two subscribers. All three subscribers can speak to one another.

Conference calls are not possible with more than two (2) connections at your phone.



To end the three-party conference, press the softkey »back_to_«. You are reconnected with the subscriber of the last previous active connection. The other subscriber is put on hold.

Telephone operation

Telephone directory

You can store up to 250 names and numbers in the telephone directory. To select a name, you can page through the directory using the arrow buttons, or enter the specific first letter(s) of the name using the push-button set.

Information:

If the name of the caller is to be shown in the display instead of the caller's number, this number must be entered in the telephone directory with that name. The telephone number must be stored with the area code and with the line access digit when using with a PABX system.

Display of the caller name is only made when the transmitted number corresponds to the number stored in the phone directory.

If the telephone is disconnected from the ISDN network and then reconnected, or if the data for the telephone directory are transferred to the system telephone via the PC program, the directory must be reorganized internally. This process takes place automatically and may require a few minutes. During this time, the telephone directory of your telephone is not available for use.

Settings for telephone book entries

Name and number

Each telephone book entry consists of a name (20 characters max.) and a number (26 digits max.). The assignments for the keypad for entering letters, digits and special characters are described on page 12.

Outgoing number (MSN assignment)

You can assign a number (»MSN-1« ... »MSN-10«) to each entry (MSN) that is to be transferred to the party being called for outgoing calls. To set up a connection with this MSN prefix first dial the number in the telephone directory in call preparation and then lift up the handset of your phone. If you establish a connection using an MSN assignment the number (MSN) for this key is displayed at the party you are calling.

To define the number(»MSN-1« ...»MSN-10«), that is to be displayed at the party being called, use the telephone directory program on the WIN-Tools CD. If you do not assign a number to an entry, or assign an incorrect number (one that is not in the phone directory), the first number entered for the telephone is transferred (»MSN-1«).

Special dial tone

You can program a special dial tone and for each entry and set the volume separately. A call is signaled using the set special ringing tone when the caller also transmits the corresponding number. This special ringing tone will then have priority over the ringing tone assigned to the selected MSN.

Infotext

You can store an info text for each entry. The information text is displayed when:

- a telephone directory entry had been selected in call preparation using the OK key.
- when a call is signaled and the softkey »Info« is pressed.
- During a connection when the softkey »Display« is pressed.


The info text length is restricted to 42 characters. The assignments for the keypad for entering letters, digits and special characters are described on page 12.

Add an entry to the telephone directory


Begin as follows:



- Enter the name.
In this example: »Mustermann«.
Confirm your entry with OK.

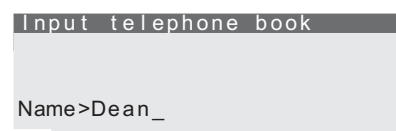

- Enter the telephone number.
In this example: »0123456«.
Confirm your entry with OK.

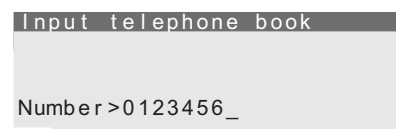


Editing phone directory entries


Begin as follows:



- Change the existing name as described on page 12.
In this example: »Dean, James«.
Confirm your entry with OK.

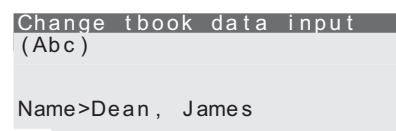

- Change the MSN extension number as described on page 13
In this example: »01122334455«.
Confirm your entry with OK.

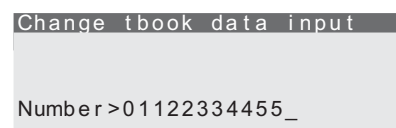


Deleting a phone directory entry

Begin as follows:







Programming special dial tones (VIP-tones) for telephone directory entries

Begin as follows:

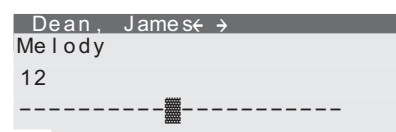

- Press the arrow buttons to select the ringing tone melody.
Confirm your entry by pressing ok.





-   Use the arrow buttons to set the volume.
-  Confirm your entry with OK.




Programming an info text for a telephone book entry

Begin as follows:

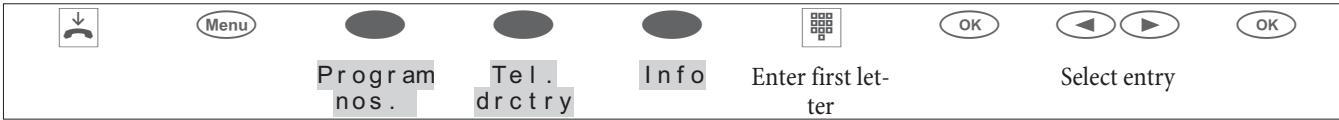

-  Enter the corresponding data for the telephone book entry. Confirm your entry with OK.

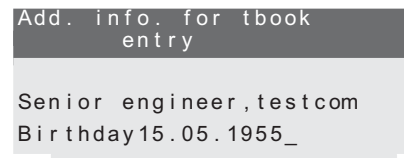

VIP-Memory


You can program VIP numbers for each of the ten dial buttons 1 ... 0 including a name (20 characters max.) and a telephone number (26 digits max.).


Programming VIP entries


Begin as follows:



-  Enter the name of the VIP target. In this example: »DEAN«. Confirm your entry with OK.

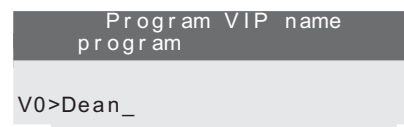



-  Enter the telephone number. In this example: »012345«. Confirm your entry with OK.

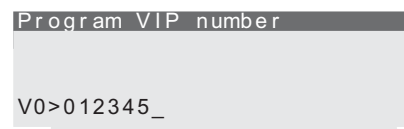



Editing VIP entries


Begin as follows:



-  Change the existing name as described on page 12. In this example: »Dean, James«. Confirm your entry with OK.



-  Change the MSN extension number as described on page 12. In this example: »01122334455«. Confirm your entry with OK.

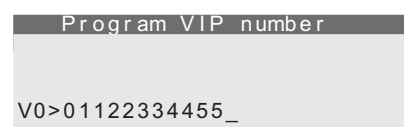

Caller- and Memo list

The phone has a combined caller and memo list. A maximum of 30 entries (calls, memos SMS messages or UUS1-messages) are stored in this list. Entries in the caller or memo list are indicated by the »**Caller list**« softkey. You always have the most current entries in the list. The most recent entry is displayed first.

When you press this softkey the number of new entries is shown on the display (for example: 4!«) together with the number of new SMS- or UUS1-messages (for example: »**Messages**: 2«).

Also shown in front of each entry is the number for that entry in the list and the total number of all entries in the list.

FOR EXAMPLE.: »3 / 10: 1122334455.....*«.

If the number in this entry is identical to a number in the telephone directory (phone directory of the telephone or the pabx) the name is displayed instead of the number. You can also view the time and the date of each entry as well as information (if applicable) about it. If you lift up the handset of your phone while you are viewing an entry in the list, that caller is then called automatically. Single entries can be selected for deletion.

Caller list

Calls that you do not accept, or that you specifically refuse, are stored in the caller list.

When a call is made with a subscriber from the caller list (you call or you are called), the entry is automatically deleted and transferred into the redial memory.

Memo list

You can store a telephone number under a scratchpad memo. You can not input letters or any other special characters. When a call is made with a subscriber from the scratchpad list (you call or you are called), the entry is automatically deleted and transferred into the redial memory.

You can enter a memo during a call or in the idle state. The following entries in the list are possible:

- Manual entry.
- Telephone number from short dialing memory.
- Telephone number from directory.
- Telephone number from direct dialing memory (Function keys).
- Number from the redialing memory.

SMS / UUS1 messages

When you receive a new message the number of messages you have received up to that time is displayed when the telephone is in the idle state. The phone number, or the name of the party who sent the message, and information about the type of message (SMS or UUS1) are shown in the caller list. When you press the menu key you can read the received message immediately, or save it in the list of SMS or UUS1 messages for reading at a later time.

After you view a new message that is located in the list of saved UUS1 or SMS messages, that message is then deleted from the caller list.

UUS1 Inhibiting filter

Use the Professional Configurator or the system telephone to inhibit or enable reception of internal and external UUS1 messages. MWI - Message Waiting Indication (e.g. T-NetBox).

The T-NetBox is an answering machine that can be provided within networks of the Deutsche Telekom AG, T-Com (German Telecom, T-Com). With the performance feature MWI (Message Waiting Indication) active you will be notified when a new message is received by your T-NetBox.

The notification is stored as an entry in the caller list. By selecting the entry and lifting the handset you can set up a connection to your T-NetBox to listen to the new message for example. The entry in the caller list is deleted automatically if no new messages are present, for example at your T-NetBox. You can also delete the entry manually. You can only use this function when your ISDN connection and your phone system support the MWI performance feature.

Viewing the caller list



The telephone is idle. The softkey »Caller list« in the lower row of the display indicates that an entry is present in the list. Press this softkey.

```
UUS:2      08:00      ← →
Tel. drctry
                               Idle
VIP
                               Caller list
```

The bottom lines show the entries available in the caller list. The active entry (the one you have selected with the arrow buttons) is highlighted.

```
Call Today      ← →
              07:21      MSN-1
1/09:Miller office *
2/09:TONY      *
3/09:123456      n
4/09:Purchasing *

```

The upper display lines show the type of entry (»Call«, »Memo«, »UUS«, »SMS«), the date (for the first two days »Today« or »Yesterday«), the time and the dialed extension (msn).

- »*« New call, UUS1 or SMS text message
- »r« Call
- »n« Display
- »i« Call ignored by call filter
- »I« Information about new messages, for example in your T-Netbox (MWI)

Information:

When you view the caller list again, entries that you have already viewed but not deleted are no longer marked by »*« on the display, but rather by »r«.

You can view other entries using the arrow buttons.

```
UUS Yesterday ← →
              15:24
5/09:112233445566 n
6/09:Sales      *
```

Further information about a call / memo

If you wish to view more information about the entry, select the entry using the arrow key and then press the menu button.



```
Call Today      ← →
              07:21      MSN-1
1/09:Miller office *
2/09:TONY      *
```

You can delete the phone number, import it into your telephone directory, or view further information about the selected entry. You may want to press the softkey »info« for example.

```
1/Miller office →
Call today 07:21
MSN-1-1      Info
Tel. drctry

delete?
              continue
```

The display now shows information about the call. If not all information fit into the screen, use the arrow keys to display more. Press the C-button to leave the menu. You can then use any one of the other options.

```
1/Miller office
0123456789
to MSN-1
(& MSN-2)
Call today 07:21
( 2 x Call)
```

»delete?« The entry is removed immediately.


»info« Viewing further information about the call.
 FOREXAMPLE.: The MSN extension number to which the message was sent and the telephone number of the sender.

»Tel. drctry« Entering the number of the caller in the phone book of the phone.

»continue« Viewing the next entry in the caller list.

Further information about a text message (SMS / UUS1)


◀ ▶ If you wish to view more information about the entry, select the entry using the arrow key and then press the menu button.

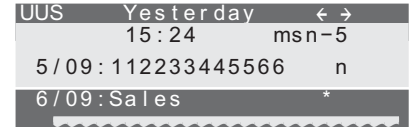

● Press the softkey »read«. Note: Press the right arrow button to have the »Tel. drctry« softkey displayed.



Ⓢ The arrow (»«) in the top row indicates an incoming text message.

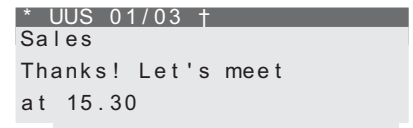

◀ ▶ If the message is not displayed completely press the arrow keys to view the rest of the message. Press ok if you have finished reading. You can then use any one of the other options.



»save« Saving the message in the corresponding list of messages and deleting the entry in the caller list.

»delete?« The message is deleted immediately and added to a list of messages.

»info« Viewing further information about the message.
 FOREXAMPLE.: The MSN extension number to which the message was sent and the telephone number of the sender.

»Tel. drctry« Entering the number of the caller in the phone book of the phone.

»continue« Viewing the next entry in the caller list.

Deleting the caller / memo list

Deleting an entry



Deleting all calls



You can delete all entries of the caller / memo list simultaneously. Text messages you have received (SMS / UUS1) will not be deleted.




Entering the number of the caller in the phone book of the phone

Begin as follows:



-  Enter the name.
-  In this example: Dean.
- Confirm your entry with OK.

The memo or caller list then displays the name instead of the number.

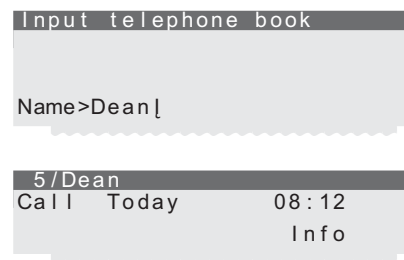

Entering a memo



You can add a memo number from:


- the telephone's phone directory (»Tel. drctry«)
- the direct dialing memory / function keys (»direct« softkey)
- the VIP memory (»VIP« softkey)
- the redial list (»redial« softkey or redial button)
- or add a new number manually (»new« softkey).

The following example describes how to add a new number as a memo.

Begin as follows:



-  Enter the number you wish to store as a memo.
-  In this example: »0123456«.
- Confirm your entry with OK.

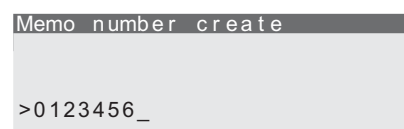

SMS and UUS1 text messages

With this phone you can send and receive SMS or UUS1 messages (SMS - Short Message Service, UUS1 - User to User Signalling). You can input a text message using the keypad on the phone. The assignments for the keypad for entering letters, digits and special characters are described on page 12.

Sending and receiving of text messages is only possible when the sender has his/her number transmitted to the receiving party, where it is also displayed. This is why text messages are not transmitted, or not displayed on the telephone, when the phone number is not transmitted with the message.

An incoming text message is signaled by two brief acoustic tones in the phone. If the phone is idle, the number of messages received is displayed, along with information about these messages in the caller list.

SMS Text Messages (subject to terms of network provider)

SMS allows you to send and receive text messages to/from other phones in a fixed-line network or to/from cell phones. An SMS is restricted to 160 characters, Up to 4 SMS messages with 612 characters can be linked automatically. A softkey confirmation is required to switch from one SMS to the next.

Sending/Receiving of SMS messages is only possible:

- When you use this telephone with a system telephony pabx system that supports the SMS feature.
- When you have registered this feature at your network service provider, or the provider of the SMS center for your ISDN connection.
- When the phone number for the SMS center is stored in the telephone.

Consult the provider of the SMS center that has been configured to establish in which networks (fixed-line or mobile communication network) SMS messages can be sent and the costs for sending and receiving SMS messages. This telephone does not support the transmission of SMS messages with special content (for example images, audio).

The telephone stores all SMS messages you have received or sent in two separate lists. Up to 10 sent and 10 received SMS messages can be stored. You can save a maximum of 5 linked SMS (regardless of whether they are double or quadruple linked). Phones that do not support linked SMSs receive these as individual SMSS messages.

Please note that free storage space must be available to receive SMS messages. You can not receive any further SMS text messages if you already have 10 SMS messages stored.

SMS messages you have sent can be stored in a list. When this list is full the SMS that was sent last is stored temporarily.

UUS1 text messages

You can send text messages from one telephone to another without having to call that particular subscriber. UUS1 text messages are limited to 31 characters.

Information:

UUS1 text messages can also be sent to internal and external telephones. You can only use this feature with external telephones if »UUS1 (User to User Signaling)« has been applied for (and approved) for your ISDN connection.

Note that all terminal devices that are used (telephones, pabx systems) must support the feature »UUS1 (User to User Signaling)«.

The telephone stores all UUS1 messages you have received or sent in two separate lists. Up to 10 received and 10 sent UUS1 messages can be stored.

Please note that free storage space must be available to receive UUS1 text messages. You can not receive any further UUS1 text messages if you already have 10 UUS1 messages stored.

UUS1 messages you have sent can be stored in a list. When this list is full the UUS1 text message that was sent last is stored temporarily.

Creating and sending text messages

You can send a text message to a number stored in your telephone (telephone directory, VIP memory or direct dialing memory), or input a new number for sending. To do this, press the corresponding softkey in the menu »Send mail»Tel. drctry«, »direct«, »VIP«, »New« or »Redialing«.

To select a number assigned to a function key (»direct«) or stored under the redial button, you can also press that corresponding key.

Information:

When sending text messages the first number (»MSN-1«) entered in the telephone or the number specified by means of the userecall flash button are transmitted with the message.

Begin as follows:



Example: Creating a UUS1 text message

Enter the text.



In this example: »Meeting 9. 30 to 11. 00 George«. Confirm your entry with OK.



Press the corresponding softkey to select a number stored in your telephone, or press »New« to enter a new phone number. FOR EXAMPLE.: »New«.



Enter the telephone number.



FOR EXAMPLE.: »2200«.

Confirm your entry with OK. The text message is transferred to the defined recipient.



Finally, you can store the text message in the appropriate list (»OK« softkey) or keep it in the temporary memory (»No« softkey).

```
Send mail
UUS>Meeting 9. 30 a. m.
to 11. 00 a. m. George_
```

```
Send mail / UUS
Repeat
Tel. drctry
New
VIP
direct
```

```
Define targt. numb
>2200_
```

```
Save memo?
No ok
```

Important notes for entering numbers with SMS transmission

If the »Direct exchange line access« feature is switched off for your telephone, then you must enter the line access digit before the target number. The line access digit must be stored in the telephone.

When the telephone is connected to a pabx for which direct exchange line access has been programmed, then you can dial the target number directly.

Sending an interlaced SMS

You can link up to 4 SMS together. A counter in the display indicates the remaining space available for characters. At the end of the first mail a query is made asking whether a linked mail is to be sent. If you replay with Yes, a message is then shown indicating the remaining free space; if you answer with No, the input of the last character is ignored and the SMS is sent as described for non-linked SMSs.

In the example shown here » 451 available« indicates the remaining space for characters still available, 1/2 denotes that 1 is the first SMS block, of 2. You can move between the blocks using the arrow key. If no space is available for saving a linked SMS, the message will only be stored temporarily.

```
Send mail
451 free 1/2 (Abc)
You can link up to 4
SMS messages
together. A counter
in the display space
indicates the remaining
available for character
```

Viewing newly received text messages

A new message can be displayed from the caller list (see page 29) or from the received text messages list. Once you have read a message from the list of temporarily stored text messages, it is deleted from the caller list.

Viewing received or sent text messages

The following features are available when viewing temporarily stored text messages:

- Resending a text message.
You can edit a text message before actually resending it.
- Deleting a text message.
- Entering the number, to which the text message was sent or from which it was received into the telephones directory.

- Putting a text message into the list of permanently stored messages (UUS1 only).

Begin as follows:



Example: Reading a received UUS1 message

The most recently added text message is displayed first. A new, unread text message is marked with an »*«. The following information can be displayed for a text message:

- Number of the text message in the list (in this example: »01/06«).
- Received (»†«) or sent (»‡«) text message (in this example: »†«).
- Number, for which the text message was sent (in this example: »msn-1«).
- Number of the sender / receiver (in this example: »2200«).

- ◀ ▶ Press the arrow keys to view the entire text messages.
- OK Press OK to access the next menu with further options.

```
* UUS 01/06 †
MSN-1
2200
I'LL PROBABLY BE 30
MINUTES late.
```

- ◀ ▶ In the upper row of the display you see the date and the time, when you received the message. To select an action, press the corresponding softkey.

```
UUS 01/06 today →
† 10:36 MSN-1
Save text
send
delete?
continue
```

- »send« Editing and then sending the text message. To send the text message, please proceed as described for »Creating and sending text messages.
- »delete?« Deleting a text message.
- »Tel. drctry« If you wish the sender's or receiver's number stored in the telephone directory, press the right arrow button and then the »Tel. drctry« softkey. Enter the name for the phone book entry and confirm by pressing OK.
- »continue« Viewing the next temporarily stored text message.
- »Text Save« Moving the text message to the list of permanently stored message. To do this, use the arrow key to select the storage location and confirm by pressing OK. (UUS1 only)


Permanently stored text messages (UUS1 only)

You can store up to five UUS1 text messages permanently in your telephone. You can then edit, delete or send these text messages. You can only input these messages directly into your telephone.

Begin as follows:



  Press the arrow keys to select a text message.

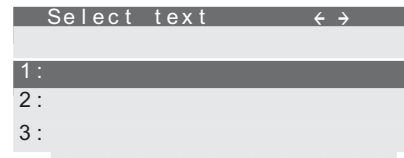

 Press OK to enter or change that text message. Confirm your entries by pressing OK.

 Press the menu key to send or delete a message.



»send« Editing and then sending the text message.
To send the text message, please proceed as described for »Creating and sending text messages«.


»delete?« Deleting a text message.

Automatic sending of text messages (UUS1 only)

You can send a UUS1 text message automatically to a caller. For this, message 1 in the list of permanently stored messages is used.


Begin as follows:



 Press the softkey »Incoming«, to activate/deactivate automatic sending of messages.

»Incoming«: automatic sending active.

»Incoming«: automatic sending not active.

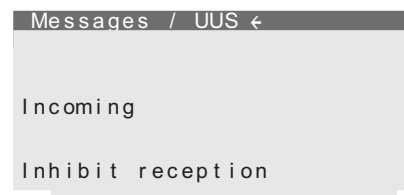


Configuring the text message reception mode (UUS1 only)

You can program your telephone for external or internal UUS1 text message reception. Reception of external and internal text messages can be inhibited separately. You can program the telephone directory in such a way that specific text messages can be received.

If you have disabled reception, external or internal text messages can only be received when the sender's phone number has been stored in the phone book with a special call signal.


Begin as follows:



 Press the »External« or »Internal« softkey to enable or inhibit reception of UUS1 messages. FOR EXAMPLE.:

»external«: .Reception of external messages inhibited.

»internal«: Reception of internal messages is possible.

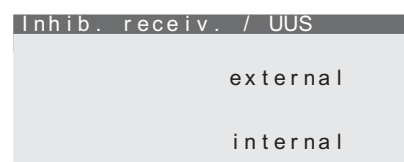

Error when sending or receiving an SMS

Error while sending an SMS

A corresponding error code is displayed in the event that for some unseen reason it is not possible to transmit an SMS. Contact the SMS Service center of your network service provider / carrier to find out which error codes are displayed.

Error while receiving an SMS


There may be various reasons for it not being possible to receive an SMS, or for only having voice output:

- The feature SMS has not been applied for (and approved) at your network service provider and/or the provider of the SMS Service Center.
- The SMS has been transferred by outside service providers which did not transmit this message as an SMS.
- Permanent number suppression (inhibit) is activated for your ISDN connection.
- Ten SMS messages have already been stored in your telephone, preventing any further SMS messages from being received.

Silent signalling

If you do not wish calls to be signaled with the programmed ringer melody and volume, you can activate the »Silent signalling« feature. Depending on the specific setting, all calls will be displayed optically or along with a brief acoustic signal. To set the volume for the brief acoustic signal, proceed as described on page 37 or »R« in the display shows that the function »Station guarding« is activated.

- »No« The function »Station guarding« is deactivated.
- »ok« Calls are signaled optically only (»Q« shown in the display).
- »Ringing signal off« Calls are signaled first by a brief acoustic signal and then only optically (»q«).
- Only for msn-1 The functions described above are configured only for MSN-1. This assumes that several MSNs have been configured in the system telephone.



Monitoring costs

You have the option of logging the accrued communication costs for your telephone. You must apply for this feature to your network service provider.

Ask your service provider on the possibilities of charge data transmission. Please note that transfer of all cost information from the exchange office to your telephone may not always be possible for technical reasons. Any price reductions and special rates or convenience features utilized may result in differences between the data stored in the telephone and information listed in the phone bill.

Procedures for charge rate transmission

There are several standardized procedures for transmitting call charge rates. Usually the same procedure is employed at one connection that is recognized and stored automatically for future use by the telephone.

In the event that the type of charge information transmission is not stored in the phone, »Wrong charge type« then appears in the display.

In this case you should delete all charge information stored in the telephone (see also: viewing/deleting total costs). Recognition and saving of the procedure that is used for transfer of cost information is then re-activated.

Information:
You can set the tariff factor and the currency while configuring your telephone with the PC.

Viewing and deleting costs

If you have implemented PIN protection for your phone's configuration (see page 61), clearing of the charge rate accounts is also PIN protected. After pressing the softkey »delete?« you then need to enter the PIN. You can also delete communication charges using the Professional Configurator.

Viewing/deleting costs for the last call

Begin as follows:



The charges for the last call are shown. To delete them, press the »Delete?« softkey.

Last conn:	0. 18 EUR	→
Last conn.		Total
delete?		

Viewing and deleting total costs

Begin as follows:



You can view the sum of the charges accrued for all MSN extension numbers. To delete them, press the »delete?« softkey.

Total:	1. 55 EUR	→
Last conn.		Total
delete?		

Information:

If the sum of the costs is deleted, all MSN cost accounts are also deleted simultaneously and recognition and saving of the procedure that is used for transfer of cost information is then re-activated.

Viewing/deleting costs for specific extension numbers (MSN)

Begin as follows:



You can view the sum of the charges accrued for a particular MSN extension number. In this example for »MSN-2«.

MSN-2:	0. 31 EUR	→
		MSN-3
MSN-1		MSN-4
MSN-2		



To delete the total costs for the selected extension number (in this example MSN-2), press the left arrow button and then the »delete?« softkey.

MSN-2:	0. 31 EUR	← →
Last conn.		Total
delete?		

Setting the tariff factor and the currency

Begin as follows:



- »Charge« Enter the new charge factor and confirm your entry by clicking »OK«. The charge factor length is restricted to 4 characters. To enter a comma, use the asterisk key.
- »Currency« Enter the new currency and confirm your entry by pressing OK. The currency name is restricted to 6 characters. The assignments for the keypad for entering letters, digits and special characters are described on page 12.
- »delete?« All charge data stored in the telephone are deleted. Recognition and saving of the procedure that is used for transfer of cost information (see page 40) is then re-activated.

Programming a charge limit for an extension number

You can set up a charge account for each number (MSN) that has been entered in the telephone. An amount in the configured currency that is available for making calls will then be allocated to this account for the defined number (MSN). Once this amount has been exhausted, only free-of-charge calls can be directed for this MSN extension number. When you have programmed specific dial ranges for this telephone, calls with costs can be directed to the unrestricted numbers.

If this limit is reached during an ongoing call, the call can be completed.

When the amount for the account is increased, or when the accrued charges are cleared calls with costs can again be made.

Information:


Attention: Not all service providers transfer charge rate information. If you make calls using a service provider which does not transmit charge information, the charge account is ineffectual.

Configuration of a charge account for a phone number (MSN) is described below using MSN1 as the example

Begin as follows:



- Enter the amount that is available for this number for making calls.
- Confirm your entry with OK.



If you enter the amount available for making calls as »0«, the charge account is not activated.


Enabling or inhibiting an extension number (MSN) for outgoing calls

Each number stored in the phone (»MSN-1« ... »MSN-10«) can be enabled or inhibited separately for outbound calls. If you have inhibited an MSN for outgoing calls, no outgoing calls can be initiated through this number (e. g. MSN assignment via function key). Incoming calls can continue to be received by this number.

If you attempt to set up a call using a number that has been inhibited for dialing, the following message is shown in the display »Inhibit. : msn«.

Enabling or inhibiting of a number for outgoing calls is protected by an MSN-specific PIN. You must enter this PIN in advance during configuration of the number (MSN). After that, you can inhibit or enable dialing of external numbers (outgoing calls) for this MSN.

Begin as follows:

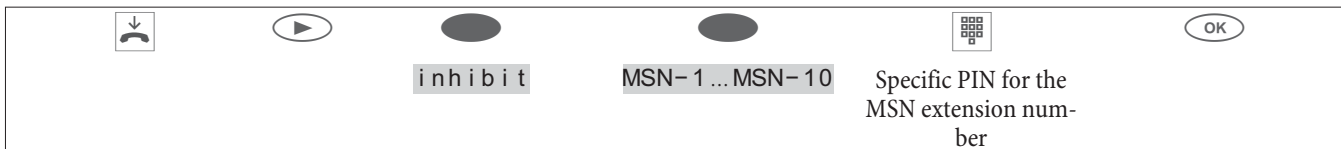

A check mark displayed next to the individual softkeys indicates the current status.


- To inhibit dialing of external numbers for a specific MSN press the softkey »**inhibit**«. To re-enable a number (MSN) for outbound calls, press the softkey »**enable**«.




Communication and charge displays

The following displays are possible during a call:


Call display for phone number
(»0123456«).

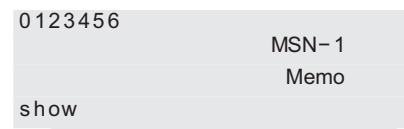


Displays during an ongoing call
(»0123456«) and time (»07 : 41«).

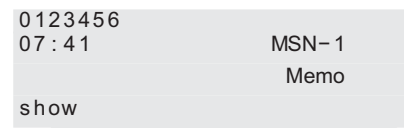


Displays during an ongoing call
(»0123456«) and duration (»32 . 43«) of the call. For example, the duration of a call can be displayed for incoming connections or when there are no charge data available.

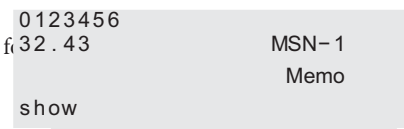

Displays during an ongoing call
(»0123456«) and charges (»0 . 36 EUR«).

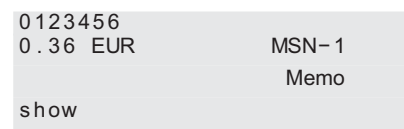

Call display for date (»29 . 05 . 06«) and time
(»07 : 41«).

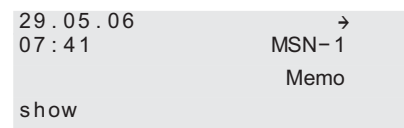

Information:

Correct charge display is shown only if you have applied at your network service provider for transmission of charges during calls.

Displaying information during a call

Information:

The displays during calls described below depend on your individual settings and can therefore be different for each connection. Correct charge display is shown only if you have applied at your network service provider for transmission of charges during calls.

- During a call, the upper rows of the display show the number or the name of the other party (»**TONY**«) and the duration of the en-

tire call (»02.43«).
Press the »display« softkey.

```

BEATRICE →
02.43      MSN-1
           Memo

show
           Keypad

Mute
           park
    
```

You are then shown other information available on the current connection.

Date (»29.05.07«), Time (»07:41«),
associated number (»0987654321«),
Costs (»0.36 EUR«), duration of the call

```

TONY
to MSN-1
29.05.07 07:41
0987654321
0,36 EUR      02.55
    
```

Press the arrow key to display further information (if available).

If you are the destination of call rerouting, you will be shown the number that is being rerouted (»UK 123«), when it is transferred.

You see the normal display again during a connection.

```

BEATRICE 03.33 →
03:33
           memo

Display
    
```



After finishing the call you see for about 5 seconds the following display.

```

TONY
Costs      0.36 EUR
    
```

Programming calling line identification mode (CLIP/CLIR/COLP/COLR)

Begin as follows:



»Incoming« Press the »Incoming« softkey to have the numbers displayed or not displayed at the called party. A checkmark displayed next to the softkey indicates that calling line identification is active.

»Outgoing« Press the »Outgoing« softkey to have the numbers displayed or not displayed at the called party. A checkmark displayed next to the softkey indicates that calling line identification is active.

System telephony

The system telephone is designed for being connected to the internal ISDN connection of pabx systems.

When operated at these pabx systems, your telephone offers you a variety of typical features. For example:

- Dialing from the pabx telephone directory (see page 15).
- Message and Intercom (see page 20, 21).
- Special function keys (see page 42).
- Access to the system menu of the pabx (see page 47).

Information:

Please refer to the operating instructions of your PABX to determine whether these typical system features are provided with this particular telephone.

Function keys

The system telephone is equipped with five function keys, which you can program on two levels with different functions.

Each key is equipped with two-color LED that can be used to display the active function. Each color is assigned to a particular level for the function key.

Function key examples

Direct dialing buttons (see page 16)

DTMF/ keypad sequences (see page 23)

Defining the MSN extension number for the next call (MSN assignment)

You can conduct an internal or external call such that a defined number (MSN) is transferred from your telephone to the party you are calling. This number must have been entered previously in your telephone.

Line keys

A B channel for an external ISDN connection is configured for a line key. When this key is pressed, hands-free calling is activated automatically and the corresponding B channel of the ISDN connection is accessed. You will hear the external dial tone.

If an external call is signaled at a different in-house telephone you can accept this call by pressing the line key.

Trunk group buttons

If several ISDN ports can be compiled to form trunk groups you can assign them to one trunk group key. When this key is pressed, hands-free calling is activated automatically and the corresponding B channel of the ISDN trunk group is accessed. You will hear the external dial tone.

Extension keys

You can configure dialing to an internal extension using an extension key. When the corresponding key is pressed hands-free calling is activated and the listed subscriber called.

If a call for the listed subscriber is signaled you can accept the call by pressing the extension key.

Waiting calls are indicated by flickering of the line key LED. The call can be picked up by any member within the group just by pressing the key.

Connection keys

Function keys at the system telephone or expansion can be configured in addition to the softkeys »Call 1.. « for executing broker's calls. In this case, two to four of these keys must be configured.

- No other keys may be configured between connection keys.
- The number of possible connections depends on the number of connection keys that are configured. If fewer than four (4) keys are configured, the functions Call waiting and Inquiry call are only available in a limited scope.
- If several connections are »Idle«, the call signaled first is picked up when the handset is lifted.
- If several connection keys are available, the corresponding connection key can be used to select the call to be picked up when several calls are waiting. Note here however that only one ISDN system telephone should be operated at the ISDN port, and that only simple call waiting is configured. Only then is it possible to give preference to a second waiting call over an ongoing call (both callers require one B channel each).
- If a call is now signaled, a further connection can be set up without lifting the handset using a further connection key.
- Broker's calls can be executed using the connection keys.
- Allocation of a connection, or of a call, is retained until the call or connection is ended, in contrast to the softkeys »Connection 1..«.
- A connection can be set up using a connection key and then pressing a line key.
- During an ongoing call it is possible to set up a further connection by pressing the connection key.
- Pressing the terminating key discontinues the current connection and the connection with the last call that was on hold.
- If you wish to connect an ongoing call with one that is on hold you must click the softkey »Transfer« and then press the connection key for the call that is on hold.

»System-parked inquiry« button

The called subscriber uses the system-parked inquiry call feature to dial the default numeric code. The telephone is now available for other uses, for example an announcement or message. A different subscriber can accept the call when he/she lifts the handset and dials the corresponding number for the call on hold. The code numbers given by the PABX system can also be entered in the function keys for one or several system telephones. If a call is placed in the Parked inquiry queue by pressing a function key, this is indicated by the LEDs of the function keys flashing at the system telephones configured for this feature. The call can be picked up by pressing the corresponding function key. This performance feature is possible when only one call is on hold.

Team keys

A team key is a normal line key to which the internal number for a team is assigned. When the corresponding key is pressed hands-free calling is activated and the listed team called.

If a call for the listed team is signaled you can accept the call by pressing the team key.

Team log-on/off

If you are entered as a subscriber in the call switching modes of one or more teams you can configure a key so as to control the call signaling of your telephone. When you are logged in, team calls will be signaled at your telephone. No team calls are signaled at your phone if you are not logged in.

Day/ Night modes

You can configure a key so that you can switch between the call switching modes of the PABX (Day/Night modes) when that key is pressed. The pabx uses call modes for signaling team or door terminal calls, for example.

Announcement (see page 20)

Message enable on/off

You can also explicitly inhibit or enable receiving of messages using a corresponding function key.

Intercom (see page 21)

Intercom enable on/off

You can also explicitly inhibit or enable receiving of intercom calls using a corresponding function key.

Boss/Sec.-function

This function enables the interaction between the phones of the secretary and the boss. Here, a special extension key with the number of the boss phone is assigned to the secretary phone, and one with the number of the secretary phone assigned to the boss phone.

Xfer secretary

In conjunction with a configured »Boss key« you can use this key to determine whether calls are to be put through directly to the boss, or whether they are to be signaled in the secretary's office.

Call filter

The call filter allows you to explicitly reject or forward calls to your system telephone. A rejected call is given a busy signal and is stored in the caller list with a special flag. You can configure the call filter using PC Configuration for the system telephone and activate or de-activate the filter using this function key.

Call rerouting

You can configure a button such that call rerouting is set up for a specific extension number (MSN) of your phone. Press this button to activate or deactivate call forwarding (see page 54).

Direct dial-in

Direct dial-in from the telephone can be configured via programmed function keys. The direct call number must be stored in the telephone before direct calling via a function key can be programmed. Deactivation of direct calls is carried out as described in the section »Direct call« (see page 53).

Headset on/off

If you have a headset connected to your telephone and ready configured, you can operate it by means of a function key. In the factory default setting, buttons 4 (headset) and 5 (auto-answer) are programmed for this. Press the headset key to initiate, accept or end a call.

Auto-Answer

Your telephone can accept calls automatically, without you having to lift the handset or press the speakercall flash button. The time interval, after which a call is automatically answered, is programmed during telephone configuration with the PC. The auto-answer feature is activated and deactivated by means of dedicated function key.

Extension key for an answering machine

This key is a special line key to which the internal number for the answering machine is assigned. A DTMF sequence can also be assigned to this key.

When you press this key the number of the answering machine is dialed and the stored DTMF sequence then transmitted. 0000, MSN enabled for dialing When the answering machine is called the speaker is activated, but the microphone remains switched off. You can also accept a call signaled at the answering machine by pressing this key.

Voice Mail-Button

If you are using a voice mail system at the PABX to which your phone is connected (for instance a Discofone voice mail system) you can also configure a button for controlling voice mail functions. You can then set up a connection to your voice mail box by pressing this button.

User on/off button (sertaste ein/aus (programming the system telephone's MSN extension number))

Normally, the first number entered in the telephone (MSN-1) is used as the default number for all settings and actions. You can set the default number for your telephone using the Userrecall flash button. When you press this key the default number for the telephone is changed to the corresponding phone number (MSN). The changed default number is then used when you initiate a call and when you send SMS or UUS messages.

Status info button**Status info / record**

This button can be configured as »Router button« (code 01) or »Recording button« (code 02).

Router button (01)

If you have configured a status information key you can terminate ongoing Internet connections and set up new ones using the provider entered in the configuration data at the click of a button. The function key LED indicates the status of an Internet connection (LED off: No connection, LED on: Connection via WAN).

Recording button (02)

(Only if this function is supported by the PABX system) When you press the Log key during an ongoing call, the log function is then activated (LED lights up).

Macro functions

You can configure the existing function keys of your telephone as self-programmed function keys. These self-programmed functions are called macro functions (macros). Macros allow you to save set routines and assign them to a specific function key. For example, you can save frequently used codes for your PABX system or specific routine actions as a macro and call it up at a later time by pressing the corresponding function key.

LED functions

Function key / LED	lit	flashes	flickers
Line key Chef-sec-Tasten	Connection	Connection on hold	Incoming call
Xfer secretary	Calls are rerouted from the boss phone to the secretary.		
System parked inquiry		Conversation held in a system-parked inquiry	
Extension key	Connection	Connection on hold	Incoming call / Call waiting
Team key			Incoming call
Trunk group button	no B-channel available		Incoming call
Extension key AM	Connection with AM/ Voice Box	AM holds active connection with caller	Incoming answering machine call
Voice Mail key		New messages available	

Function key / LED	lit	not lit
MSN assignment	connection established by means of the key	
Team function log-on/log-off	logged in	logged out

Day/ night mode	Night active	day active
Announcement	own message	
Message enable on/off	enabled	inhibited
Intercom	own intercom	
intercom enable on/off	enabled	inhibited
Call filter	active	off
Call rerouting	active	not active
Direct dial-in	active	not active
Headset on/off	Connection or connection establishment	no connection
Status info button (01)	Connection active	no WAN connection
Auto-Answer	active	not active
Userecall flash button	modified number	default number

Function key / LED	lit	flashes	flickers	not lit
Connection keys	Existing connection	Connection being put on hold	Call status	No connection

Information:

Each function key with automatic LED functions (e. g. extension keys, line keys) may only be programmed one time for each system (telephone and key expansion module).

Programming a function key

Programming of the function keys is effected during configuration of the system telephone with the PC. You can program the five function keys on two levels with different functions.

Using the function key

Press the corresponding function key. The function assigned to this key is executed. An LED associated with this particular function is switched on or off accordingly.

Press the key two times to reach the second level for the function keys. This must be executed at a short interval.

Important notes for LED functions

The status of the LEDs is not updated permanently in the system telephone. The status of the LEDs is not changed when these functions are changed or switched using a code or PC configuration for the PABX system. If the telephone is disconnected from the ISDN network (for example for Parking of a call) the LEDs will be off when the system telephone is plugged in again.

The display for the assigned LED is changed and the corresponding feature activated/de-activated in the PABX system when you press a function key.

Example: You activate the message to your system telephone using the function key and someone else de-activates the announcement via the PABX system PC configuration. When you press the function key you also de-activate the message and the assigned LED is switched accordingly.

System menu at a pabx with system telephony

The system telephone is designed for being connected to the internal ISDN connection of pabx systems. These devices provide a special menu with further system-specific functions. This menu and the features that it contains are managed entirely in the PABX.

Information:

Simply press the »PABX« softkey to access the system menu.

Accessing the system menu for PABX systems



The telephone is idle. Press the right arrow key.



Press the »PABX« softkey.



Information:

The description of the menu and the features which are available to you in this menu are given in the operating instructions for your PABX system.

Configuring and setting up the system telephone

Extended configuration

For a full configuration the following options are available:

- PC-configuration using the telephone's USB-port
- Configuration using the internal ISDN port of a PABX.
- Extended configuration directly at the phone You must enter a code before you can access the extended configuration mode.

Only limited configuration is possible when the telephone is recognized as a system telephone when connected to an System PABX system. You have to enter a specific code number in order to enter the telephone's extended configuration mode.

If the telephone is not recognized as a system telephone (for example when connected to the NTBA or at an internal ISDN port of a PABX system that is not part of the system), the extended configuration is activated automatically. In this case you do not have to input the activation or deactivation codes for extended configuration.

Activating the extended configuration mode

Enter the code `»**46 782 551 ##«` (Vanity format `»**INSTALL1##«`).

Information:

Release for remote access of the phone is effected for 30 minutes.

Deactivating the extended configuration mode

Enter the code `»**46 782 550 ##«` (Vanity format `»**INSTALL0##«`).

If the ISDN telephone is disconnected from the ISDN network, (for example by unplugging the ISDN connector of the phone or by switching off or resetting the pabx), the extended configuration mode will be automatically switched off.

Information:

In the configuration described in the following, performance features and functions that can be only entirely or partially configured using `»Extended configuration«` are shown underlined in the display shots.

Example:

- The display shows the performance feature `»Direct dialing«`, that can only be configured with `»Extended configuration«` or using the `»Professional Configurator«`. In the "normal configuration" this performance feature is not shown in the display.

```

Program tnumbs
Tel. drctry
VIP
direct

```

Acoustic

headset

If a special support feature is stored in your telephone for the headset your are using, set your phone for that headset model.


For example, the LED in the microphone extension for »Firefly F142 N« from Plantronics can be activated by the telephone.

Begin as follows:



A check mark displayed next to the individual softkeys indicates the current status.


Press the appropriate softkey to configure the connected headset.

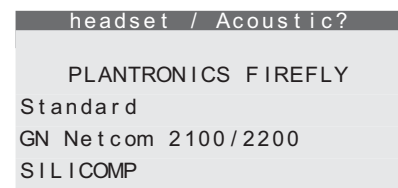

Speaker

Permanent handset volume setting

Begin as follows:



Use the arrow buttons to set the volume. The bar in the display indicates the current status.

Confirm your entry with OK.




Temporary volume setting

The telephone is idle or you wish to change the speaker volume during an ongoing call.

Press the open listening button.

Press the menu key.

Use the arrow buttons to set the volume of the speaker. The bar in the display indicates the current status.

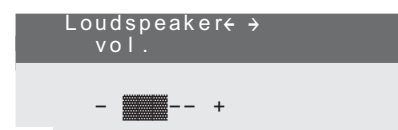

Press ESC in order to return to the normal display during an ongoing call. If you confirm your entry by pressing OK instead of the ESC, the permanently set value is overwritten by the newly set one.

Call waiting


If the function call waiting (see page 55) is enabled on your telephone you can set the volume of the call waiting signal. You can also select whether a waiting call is signaled only once, or several times.





Begin as follows:

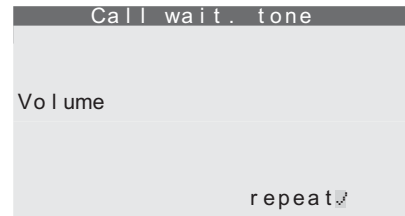


The check mark next to »repeat« indicates that a waiting call will be signaled repeatedly.

If you press the softkey again, a waiting call is signaled only once. The check mark next to »repeat« is deleted.



-  Press the »Volume« softkey.
-   Use the arrow buttons to set the volume of the call waiting signal. The bar in the display indicates the current status.
-  Confirm your entry with OK.

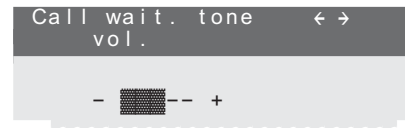


Acknowledgement signals


With your ISDN system telephone you can select whether the acknowledgement signals are always active, never active or only active when an incorrect entry is made. The default setting has the acknowledgement signal always active.

Begin as follows:



A check mark displayed next to the individual softkeys indicates the current status.

-  Press the softkey for the desired function:
 - »No«: Acknowledgement tones always off
 - »ok«: Acknowledgement signal always active.
 - »Only error tn«: Acknowledgment signal active for erroneous input.

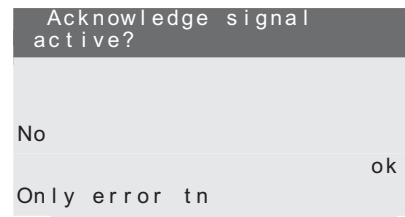




Idle


Notice tone volume for »Station guarding«

You have various options of setting your telephone to »Station guarding« (see page 37). You can set your telephone to signal incoming calls by a brief acoustic signal while »Station guarding« is active. The volume of that idle tone is adjustable.

Begin as follows:



-   Use the arrow buttons to set the volume. The bar in the display indicates the current status.
-  Confirm your entry with OK.

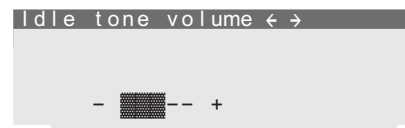




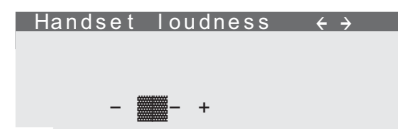
Handset

Permanent handset volume setting







Begin as follows:




-   Use the arrow buttons to set the volume. The bar in the display indicates the current status.
-  Confirm your entry with OK.



Temporary volume setting

-   You lift the handset or you are conducting a call.
-  Press the menu key.
-   Use the arrow buttons to set the volume of the handset. The bar in the display indicates the current status.
-  Press ESC in order to return to the normal display during an ongoing call. If you confirm your entry by pressing OK instead of the ESC, the permanently set value is overwritten by the newly set one.

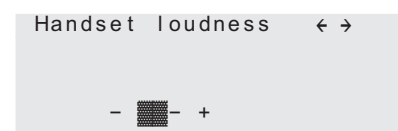




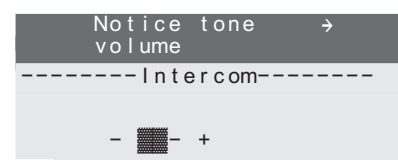
Notice tone (announcement and Intercom)

You can adjust the volume of the acoustic signal that is sounded at the beginning of an announcement and during intercom calls. The settings you have made for »Intercom« apply for announcements and intercom calls.

Begin as follows:



-   Use the arrow buttons to set the volume. The bar in the display indicates the current status.
-  Confirm your entry with OK.



Announcement

Intercom


Information:




The menu items »Announcement« and »Intercom« do not relate to settings but rather to the use of these features (see page 20 /21).


Answering machine

You can set the volume of the acknowledgement tone for the answering machine.

Begin as follows:



-   Use the arrow buttons to set the volume. The bar in the display indicates the current status.
-  Confirm your entry with OK.

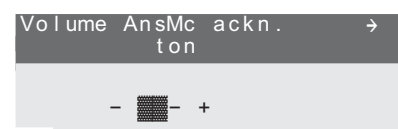

Date

Appointment reminder volume

You can set various appointments (see page 56) for your phone for which an acoustic and optical signal is issued when the set date and time are reached. You can set the signaling volume for the appointment as follows.

Begin as follows:

Use the arrow buttons to set the volume. The bar in the display indicates the current status.

Confirm your entry with OK.

Audio-Out

Audio-Out-Features

The telephone is equipped with an audio output (Audio-Out socket). Several acoustic telephone functions can be used in parallel with the local speaker via this output. You can also connect external speakers, for example, to allow a message to be heard in the entire office.

The following features can be used with the audio output:

- Message, Open listening, Hands free calling, Calling signals.

Begin as follows:

Press the appropriate softkey to switch the external output on or off. A checkmark displayed next to the softkey indicates that this feature will be output through the Audio-Out port. Press the corresponding softkey again to deactivate the audio output. The check mark next to the softkey is deleted.

Listening to Audio-In over the speaker

When the system telephone is idle, you can listen to audio signals directly from the system telephone speaker. You can also listen to MoH announcements or Internet music in this manner if your PC is not equipped with speakers.

Setting the volume

Begin as follows:

Use the arrow buttons to select the desired volume.

Settings

Direct call

You can program a direct call for your telephone so that when you press any key (except for ESC and the menu key) a set number will be dialed. If the automatic call function is active only one connection can be established to the set number. If you wish to establish a connection to a different number you must first deactivate the direct dial-in function.

An active direct call is protected by means of the telephone PIN (see page 60). The direct call function can then only be deactivated after entering this PIN. As long as the PIN is set to »0000« (default setting), you do not need to enter the PIN and can continue by pressing OK.

The following functions are possible with the automatic dial-in activated:

- Automatic dialing of the set number after lifting the handset of your phone, or pressing any key (except for ESC and the F-menu key).
- Accepting calls, provided these are not suppressed by the call filter.
- Signaling of previously programmed appointment reminders.

Information:

Further functions (e.g.: function keys, TAPI functions or headset operation) are not possible when direct dialing is activated.

Programming an automatic call number

Begin as follows:



Enter the telephone number.

In this example: »098765«.



Confirm your entry with OK.


Dir. call-in number

Direct cal>098765

Information:

If you are using your telephone with a PABX system without direct exchange line access, first enter the line access digit to obtain external line access followed by the automatic dial-in number.

Activating direct call



Direct dialing is now activated. The set direct call number is shown on the second line of the display.

07:41 Dir. call
098765

Deactivate direct dial-in




The phone is in the idle mode with the direct call-in feature enabled.

Press the menu key.


07:41 Dir. call
098765



Enter the programmed PIN (in this example: »0000«).
Confirm your entry with OK.

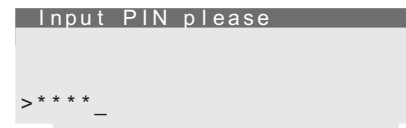

Press the softkey »ok« to deactivate direct dialing.

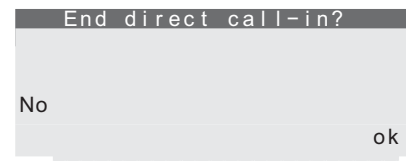

Call rerouting (call forwarding)

With this telephone you can be reached, even if you are not in the vicinity of your phone. This is achieved by the system automatically forwarding calls to another internal or external number.

Call rerouting can be configured separately for any of the entered numbers (MSN). To utilize the call rerouting function you must have already configured at least one phone number.

The following settings are possible for all MSN extension numbers.

- »**delayed**« Delayed call forwarding:
All calls for this number are signaled for a defined time at the exchange or in the PABX and are then forwarded when this period expires.
- »**busy**« Call forwarding on busy:
The calls for a defined number are forwarded only when the telephone is busy.
(FOREXAMPLE.: There are already two (2) connections made, or one connection has been made and call waiting is not permitted)
- »**Fixed**« Direct call forwarding:
All calls for a number for which „fixed“ call rerouting has been configured are rerouted. Your telephone will not ring, when this number is called.

You can configure simultaneous delayed call rerouting and call rerouting on busy. If you have configured a set call rerouting, cancel this function before configuring a new (other) call rerouting function.

Information:


If you operate your telephone with a pabx, please observe the call rerouting information (call forwarding) given in the operating instructions for your pabx.

If your is directly connected to the network termination unit, please observe the corresponding information supplied by the service provider.


Activate call forwarding

The following example describes how to set up MSN 1 for permanent call forwarding.


Begin as follows:



Enter the number to which the calls are to be forwarded.
In this example: »0123456789«.

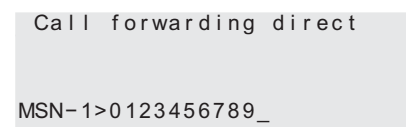

Confirm your entry with OK.
Call rerouting has been registered. The three dots at the right lower corner flash alternately.



Viewing current call forwarding

When the telephone is idle, a »U« on the second line indicates that Call rerouting has been activated. Press the »Info« softkey if you wish to have more information displayed for the programmed call rerouting.

Deactivating call rerouting

The following example describes how to set up MSN 1 for permanent call forwarding.



Special features for the Swiss version

In the default setting the telephone is designed for being operated at the internal ISDN port of a pabx. If you wish to use your telephone at the network termination unit or at a third-party pabx, you will have to change the call rerouting protocol (»Keypad« or »ETSI«) as described below.

Use at a point-to-multipoint connection (network termination unit)



Use with a PABX



Call waiting

If, during an ongoing call, a second call comes in for you, the second call is signaled when »Call wait. protect. on« is set. A caller will hear the busy signal, when you have set your telephone to »Call waiting off«.

A waiting call is indicated by a brief acoustic signal in the speaker and also displayed. You can set the volume of the call waiting signal and select whether a waiting call is to be signaled only one time, or several times (see page 50).


When the function »Silent signalling« is activated, call signalling is carried out as described for this feature. If you are using the hands-free option for an active connection, waiting calls will only be signaled optically in the display.

The following entries are possible for the call waiting feature:

Begin as follows:



- Press the appropriate softkey below the desired call waiting type. The check mark next to a softkey indicates which setting is currently activated for selection in the first line. When there are various settings possible, first select the variant from the first line and then the function from the lower lines. Repeat these steps until all variants are set.

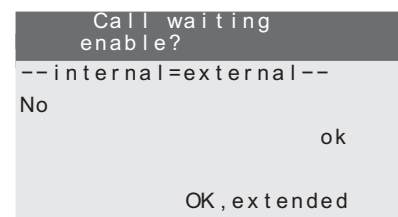

- **internal, external, internal = external**
You can select the settings to be used for call waiting; internal only, external only, or internal and external.
- **No:**
With an ongoing connection or while a connection is being established, no further calls will be signaled.
- **ok:**
line Call waiting from only one subscriber is possible when:\line Only one or two active connections and no call waiting connection is present at your phone.
- **OK, extended:**
Up to 4 simultaneous connections are possible on your telephone. For example, two further calls can also be signaled by call waiting while two other calls are already in progress.


Display contrast

You can set individual contrast levels.

Begin as follows:



- Use the arrow buttons to set the contrast.
- Confirm your entry with OK.

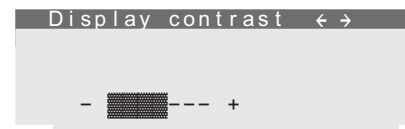

Appointment

You have the option of setting three different appointments with your telephone:

- The set appointment is signaled daily.
- The set appointment is signaled once.
- The appointment is signaled weekly at the preset date and time.

Once the date and time of the set appointment are reached, an acoustic (with fixed tune and volume) and optical signal is issued. The volume of the signal used to indicate an appointment can be adjusted individually (see page 52). You can store a text for each appointment (42 characters max.) which will be displayed when the appointment is reached.

If you press ESC, signaling of the appointment is interrupted and then continued later as a reminder. To terminate signaling of an appointment press OK. Signaling of the appointment can also occur during a call, or when you have set the »Station guarding« feature.

When the telephone is idle, a »T« on the info line indicates that an appointment has been set up.


Programming an date reminder

The following example describes how to program a weekly appointment 1.


Begin as follows:




- Enter the time of the appointment.
In this example: »0930«.
Confirm your entry with OK.

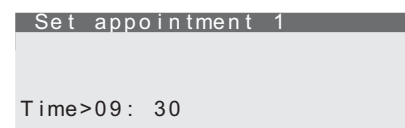

- Enter the date of the appointment.
In this example:»030603«.
Confirm your entry with OK.

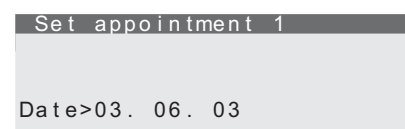

- Enter an information text for appointment 1 (42 characters max).
In this example: »Telephone project meeting«.
Confirm your entry with OK.

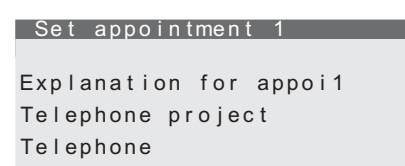


Information:

If you wish to only change the information text for an existing appointment, select that appointment using the ar-

row keys and then click the menu key.

Deactivating an appointment reminder

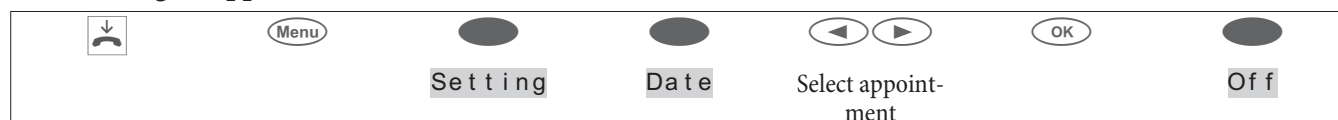

Auto-Answer


Your telephone can accept calls automatically, without you having to lift the handset or press the speaker (headset) key. The auto-answer feature can be switched on or off with a function key that has been programmed for this purpose.

Begin as follows:



A check mark displayed next to the individual softkeys indicates the current status.

- Press the appropriate softkey to set the time after which a call is automatically answered.

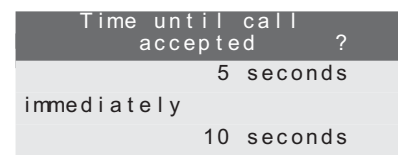

Headset

Automatic headset use

If you have a headset connected to your telephone, you can use it automatically for specific features.

Automatic headset use active:

The call is taken via the headset when you press an extension or line key with automatic accepting of calls activated.

Automatic headset use not active:


The call is taken via the open listening / hands-free calling functions when you press an extension or line key with automatic accepting of calls activated.

Begin as follows:



A check mark displayed next to the individual softkeys indicates the current status.

- Press the appropriate softkey to activate or deactivate automatic headset operation.

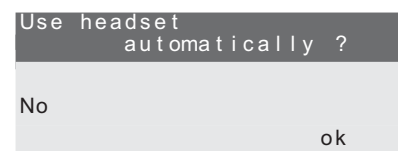

Operation

Information:


This feature requires an »Extended Configuration«. It will otherwise not be displayed.

Begin as follows:



- **Keypad / DTMF:**
Default setting during a connection (Softkey »Keypad« oder »DTMF«)

Select whether in the initial settings »DTMF« or »keypad« is possible during an ongoing call;

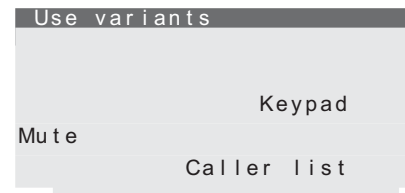

Mute:

Hands-free dialing (softkey »Mute«)

Set whether the microphone is activated with the handset in place (e. g. hands-free calling), or whether it must be switched on by pressing the softkey »speak«.

Caller list:


Actuate the softkey »Caller list«. If you select »Only messages«, this applies to the settings »Off«, or »On«.

Setting the time


Begin as follows:



Enter the time and press OK to confirm.

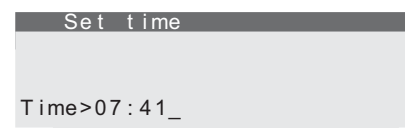

Enter the date and press OK to confirm.

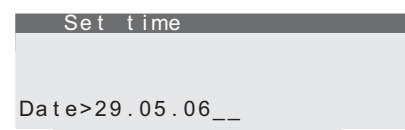

Call filter

The call filter allows specific calls to be put through or rejected on the basis of the recognized phone number. You can enter up to five filter numbers (26 digits max.) for the call filter. Filter numbers can be local area codes or partial or complete numbers. When you enter »****« you can include calls which do not transmit the number (caller ID) in the call filter. Using the call filter, calls whose numbers, or beginning numbers concur with the filter numbers entered in the system, can be rejected or accepted.

Rejected calls are saved in the caller list with a special flag. If the call was only signaled at your telephone the caller will hear the busy signal when the call is rejected by the call filter. If you are a member of a team, then this call will continue to be signaled at the phones of your team.

Call filter operating modes

- »No« All calls signaled.
- »reject« Calls whose numbers, or beginning numbers concur with stored filter numbers will be rejected. All other calls are signaled.
- »forward« Calls whose numbers, or beginning numbers concur with stored filter numbers will be signaled. All other calls are not signaled.
- »All calls« No calls are signaled.

Programming filter numbers

You can configure a new filter number, or use a number already stored in the telephone (redialing, telephone directory, VIP or speed dialing memory).

The following example describes how to enter a new filter number.

Begin as follows:



Enter the filter number. In this example: »012345«.

Confirm your entry with OK.




Programming call filter operating modes

Begin as follows:



A check mark displayed next to the individual softkeys indicates the current status.

Press the appropriate softkey to set the call filter to the desired mode of operation.

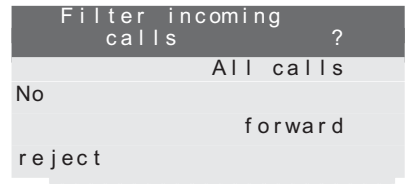


Configuration

Begin as follows:



The display shows you the various configuration possibilities. Press the desired softkey to have the next display shown.

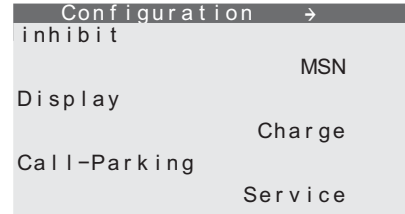

inhibit

Begin as follows:



Actuate the softkey »**inhibit**« and enter the PIN for »**Inhibit**« (factory default 0000).



PIN

(password) for the telephone

Some telephone settings and operations are protected by a PIN (password).

- Access to the telephone menus (see page 61)
- Deactivate direct dial-in (see page 53)
- Remote control of the answering machine (option module)
- Access to the »**Service**« menu (see page 73)

Use this menu to set up your individual PIN (0000...9999). Please write down the entered PIN. If you forget your PIN, you will not be able to access any of the PIN-protected settings. In this case please ask your specialized dealer or distributor.

Begin as follows:






Enter the new PIN.



In this example: »1234«.

Confirm your entry with OK.

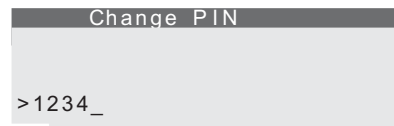

Information:

Attention: The PIN is also reset to (0000) after executing the service reset for restoring the initial state (see page 74).

Menu

Accessing a menu via the PIN:

In these operating instructions, access to menus is always described without the use of a PIN. If you set the PIN protection for a specific menu, you can access this menu as described in the following example.

Begin as follows:




Protecting access to the telephone menus by a PIN

With the telephone PIN you can restrict access to the telephone menus (»Configuration«, »Setting« and »Program nos.«) and protect the stored charge data from unauthorized deletion. Before a menu can be called up (e.g. menu button and »Configuration« key), the PIN must be entered when the protection feature is active.

You can set access restrictions separately for the »Configuration«, »Setting« and »Program nos.« menus. The »inhibit« and »Service« menus are always protected by the telephone PIN. Access restrictions for the »Configuration« menu will also apply for deleting stored charge data.

● Press the »Configuration« softkey to activate or deactivate the PIN protection feature.



● A check mark next to »Configuration« indicates that the access restriction is active. Press the »Configuration« softkey again to deactivate the protection feature.


Outgoing

Information:


This feature requires an »Extended Configuration« to show on the display.

Here, you can determine which call control function(s) you want to configure.

Begin as follows:



● **List:**
Select »List« to enable or inhibit the numbers entered here for dialing. A checkmark shows you which list is active.

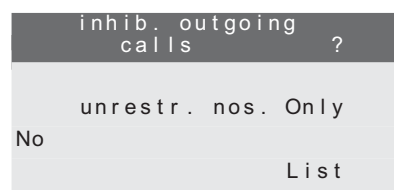

● **unrestr. nos. Only:**
Select »unrestr. nos. Only« if you wish to enable all unrestricted numbers for outgoing calls. If no unrestricted number have

been entered, no further calls can be made. Numbers specified as unrestricted have priority over restricted numbers.

List

Information:


This feature requires an »Extended Configuration« to show on the display.

You can enter 7 unrestricted and 7 restricted numbers into your telephone.

Begin as follows:




Use the arrow buttons to select the desired call number or a free field and then confirm with »OK«. Then enter the new number or delete or edit an existing one.

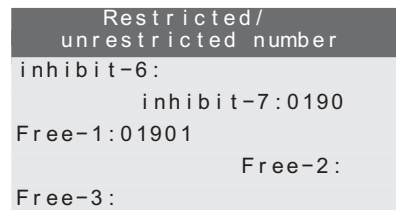

Display

Call number

Use »incoming« and »outgoing« to have your extension number or the number of the calling party presented. A checkmark shows you, which feature is currently active (in this example here: outgoing).

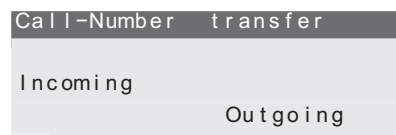

Language


You can select the language of your display.

Begin as follows:



Press the arrow buttons to view the available languages.

Press the softkey adjacent to the desired language. The display switches to the changed language immediately.

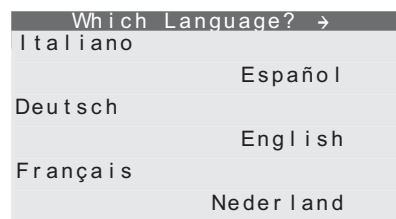

Conversation

Programming communication and charge displays

Begin as follows:






Conversation:

Configuring displays during an ongoing call.

The following options are available:

»date+time«, »Tel.numb. only«, »Tnumb+Time« OR »Tnumb+Charge«.

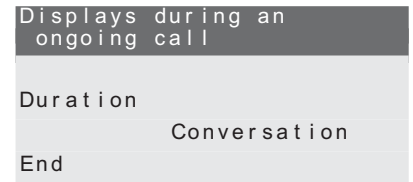

Duration:


Setting the call duration display

The following options for displaying the call duration are available:

»Always«: The duration is the only information displayed during a call.

»Never«: The charges are displayed during a call. The duration of a call is not displayed.


»for Charge«: Charge data, if available, are displayed. If no charge data are available, the duration is displayed instead.

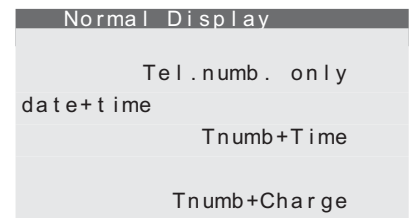

End:

Display of information after completion of a call.

At the completion of a call, information about that call (for example, duration, or charges accrued) can be shown in the display.

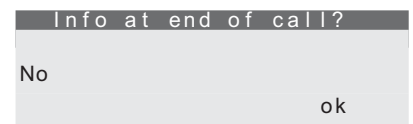


Call-Parking (default setting)

A parking code of 55 is set in the initial state. You can change the default park code to a single- or double-digit code.

Begin as follows:





The initially set park code is displayed: »55«. Enter the new parking code and confirm your entry by pressing OK.

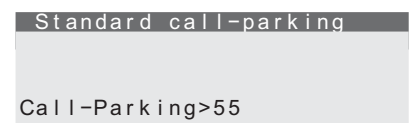

Connection to a pabx

Information:
This feature requires an »Extended Configuration« to show on the display.

If you operate your phone with a pabx, you can make all entries required here. Begin as follows:

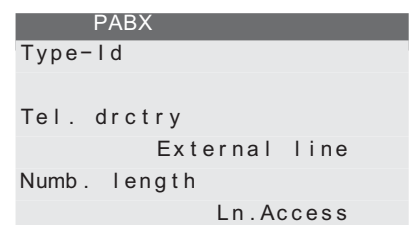

- Type-Id**
 PABX-type (softkey »Type-Id«)
Type 0: The PABX system does not transmit the line access digit on incoming calls. The line access digit must be entered in the phone.
Type 1: The PABX system transmits a line access digit on incoming calls. No line access digit should be entered in the phone.
- Telephone directory:**
 With this setting you can define, whether the telephone directory of the pabx or the telephone book of the phone is loaded, when the »telephone directory« button is pressed.
- Number length:**
 The maximum length for internal numbers that are assigned to different internal extensions within your PABX system.
- Line access digit for the pabx:**
 The line access digit is placed automatically in front of the number of the caller for the external calls.
- In. access:**
 Direct exchange line access (softkey »In. access«)
 With direct exchange line access, you do not have to dial the line access digit for conducting outgoing calls.



MSN (extension numbers)

Up to 10 MSN (extension numbers) can be configured on your telephone. When you enter an MSN or extension number in your ISDN system telephone you are essentially defining that your ISDN system telephone is called using this MSN or extension number when a call is made. If you enter more than one MSN extension number in your telephone, your phone will ring each time one of these MSN extension numbers is called. If you are using your telephone on the external ISDN port of a pabx, enter its internal extension number into the pabx. Please observe the instructions in the PABX manual.

When you call a subscriber, you can select a certain number (MSN) that is transmitted to the subscriber (e. g. for separate charges). If you do not select any number, the number (MSN) that has been entered first in the phone (MSN-1) is used.

Information:
 How to configure an MSN (extension number) is described in the following example with »MSN-1«.

Begin as follows:

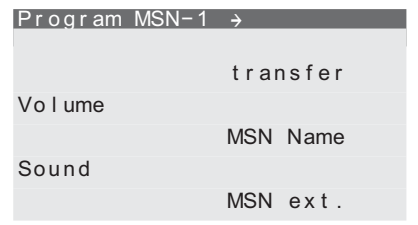


Entering or viewing an extension number (MSN)

You can only enter the MSN extension numbers with the Professional Configurator supplied on the WIN-Tools CD-ROM. However, you can have the programmed number displayed at the phone. The extended configuration allows you to enter the MSN extension number after having entered a code number (see page 67).

- In the »Program MSN-1« menu, press the »MSN ext.« softkey.

- OK The programmed number is displayed.
 Press OK to leave this menu.

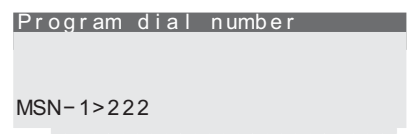

Information:

You can only make further settings (e. g. call signaling melody, volume, name) if the number has already been previously configured.

Setting the melody and the volume

You can define and set a specific melody and its volume for each MSN or extension number that you enter. If you are using the telephone at an internal ISDN connection of certain elmeg PABX systems, you can program special ringing melodies and a different volume for internal calls.




In the initial setting of the telephone, 10 different melodies are stored for call signaling. These 10 melodies can not be changed. You can import a further 10 melodies into your phone via a PC. Using the Sound Manager supplied with the WIN-Tools CD-ROM, you can produce your own tunes on the PC and then load these into the telephone. These melodies are then stored in your phone as Melody 11 ... 20. Ready-to-use melody profiles for downloading to your phone are located in the WIN-Tools installation directory.


Information:

If you assign a call signaling melody to a number (MSN) that is not stored in your phone, the first permanently stored melody in your phone is then used.




Programming a melody (sound)


In the »Program MSN-1« menu press the »Sound« softkey and then the »internal« or »external« softkey. In this example: »internal«.

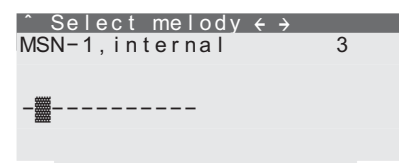-   Use the arrow buttons to set the desired melody. The bar in the display indicates the current status.
-  Confirm your entry by pressing ok.

**Setting the volume**

In the »Program MSN-1« menu press the »Volume« softkey and then the »internal« or »external« softkey.

-   Use the arrow buttons to set the volume and the ringer melody. The bar in the display indicates the current status.
-  Confirm your entry by pressing ok.

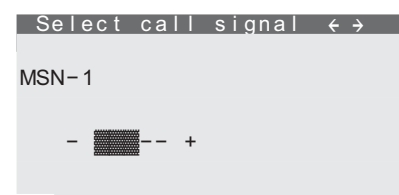



In addition to steady volumes, you can also configure call signaling with an increasing volume. When this is done, the volume of the ringing tone is increased automatically as the call is signaled. When the increasing volume function is configured the following symbol is shown in the display »■■■■■■■■«

Entering a name for an extension number

You can assign your own names (max. 8 characters) to the MSN extension numbers.

On each of the buttons on the push-button set there are three or four letters of the alphabet. You can advance through the letters by pressing the appropriate button repeatedly (see page 12). If there are two consecutive letters on the same button of the push-button set, press the right arrow button after entering the first letter and then enter the next letter.

 In the »Program MSN-1« menu press the »MSN Name« softkey«.



 Enter the name desired name. In this example: »private«. Confirm your entry with OK.




Programming a default call forwarding number

If you do not wish to accept a call, you can forward this call directly to a different phone number (see page 17). If you frequently forward calls to the same number, you can use this number as a default setting in your phone. If you then wish to forward a call, the default number will be presented first for you to use. The default setting for such a number is made separately for each number (MSN) entered in the telephone.

In the »Program MSN-1« menu press the »transfer« softkey.

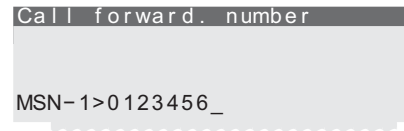

 Enter the desired telephone number. To delete an existing number press the C button.
 In this example: »0123456«.  Confirm your entry with OK.





Programming a specific PIN for an extension number (MSN)


You can assign separate PINs to all of your telephone's extension numbers (MSN). Using this PIN, you can enable or inhibit an extension number (MSN) for outbound calls.

Information:
 In the initial state, all MSN-specific PINs are set to »0000«. In the »Program MSN-1« menu press the right arrow button and the »PIN« softkey«.


 Enter the specific PIN for »MSN-1« (default setting »0000«). If you have forgotten the MSN-specific PIN, you can access this menu via the individual PIN for the telephone.  Confirm your entry with OK.



 Enter the 4-digit specific PIN for MSN. In this example: »1234«.  Confirm your entry with OK.

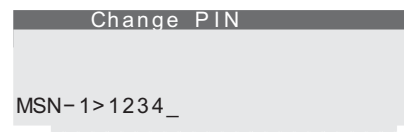


Setting up the IP-S400

If you only pressed the  instead of entering the MSN when turning on your system telephone (see Page 68), you can now complete the log-in and assign the corresponding MSN to the system telephone.

Incomplete log-in is indicated on the title line of your system telephone display.



Begin as follows:

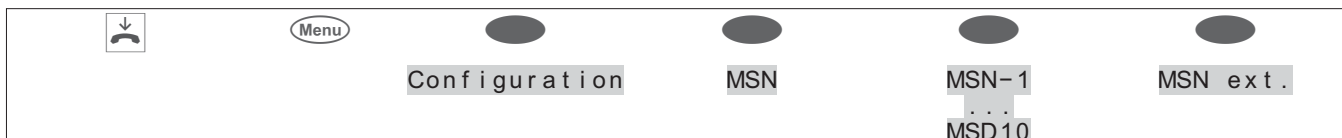




Enter the MSN. In this example: »12«.



This MSN must already be assigned as an »internal number« for your system telephone via the »Professional Configurator«, or assigned now. This MSN is inactive until the same MSN (internal number) is entered using the »Professional Configurator«.

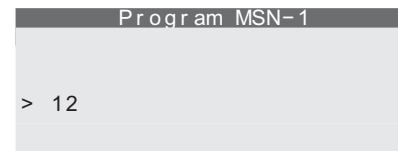

Log-on


Information:

The following input actions are optional and are used only for system security – they are not necessarily required for proper functioning of the system.

Simple log-in for DHCP is described on Page . If a PIN has already been given under »Allow configuration« and the »Log-in name« entered under »Subscriber name« in the »Professional Configurator«, you must now also enter this information for the IP-S400. You must enter the MSN as the name (only digits are permitted). You can do this using the »Professional Systel-Configurator« or on the system telephone itself. If you enter the »IPS Log-in PIN« in the system telephone first, you must also enter that information in the subsequent configuration for the PABX system.

Entering the IPS Log-in PIN

Begin as follows:



Enter the phone PIN under »PIN«. Only digits are permitted for this PIN. In the example shown here (factory setting) »0000«. Confirm your entry by pressing OK.



Entering the »Sys-Server Log-In PIN for the IPS«

Observe the different designations when entering the PIN:


PIN name in the configuration with the system telephone: Log-In PIN.

PIN name in the configuration using the »Professional Systel-Configurator« for the system telephone: Log-in-PIN

PIN name for configuration of the subscriber the »Professional Configurator« for the PABX system: PIN



Enter the »Log-in PIN«. When you press the 0 key several times in a row the possible special characters that can be used are displayed, along with their current position on the key panel. Up to 4 levels are displayed each time you press the 0 key. When you then press a key 0...9 the character displayed for that particular key is selected. Wait until the cursor moves forward one field before attempting to enter the next character. Only the character that is currently being entered is visible; characters that have already been entered are hidden by the asterisk symbol. Example: Press the key 0 one time and then key 6; the @ symbol is selected.

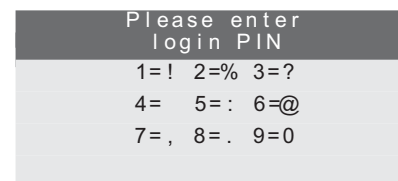

Confirm your entry by pressing OK.




Press the **ESC** button.

- Synchronizing of telephone and PABX system.

Information:

Please note that logging in and synchronization may take several moments!


Information:

If there is no connection to the PABX system (no LAN link, or the telephone has not been logged in, »----- / /---> « will be shown in the display instead of the time.


Configuring the IP-S400 without DHCP

Simple logging in under DHCP is explained on Page . If you have different settings in your PABX system you can enter that data here. You can call up the data and IP address here for a system telephone logged in under DHCP, or, you can change these settings if DHCP is de-activated.

Begin as follows:




● Press the appropriate softkey.

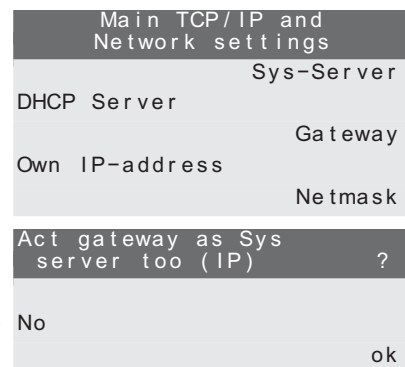

● **Sys Server:**
If the elmeg PABX system gateway serves simultaneously as the system server you do not need to input any data here. If this is not the case you must click the Softkey »No« and then enter the system server IP address here. Gateway IP address when connecting directly to the elmeg PABX system.


● **DHCP Server:**
Here, you can select whether your system telephone is to be assigned its IP address automatically from the system (»On«), or whether you wish to configure this feature on your own (»Off«).

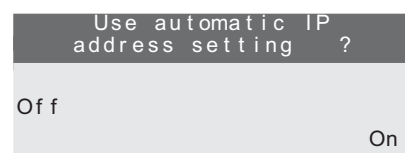

● **Gateway:**
If »DHCP« is not activated you must enter the network IP address here in which your system telephone is located.



● **IP address:**
If you have selected »Off« under »DHCP«, you must enter the IP address for the telephone as given by the PABX system or by the network in which the system telephone is located.

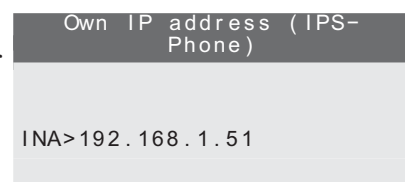

**Netmask:**

In the setting »DHCP« the network / subnetwork mask is applied to the PABX system. If »DHCP« is de-activated, you can enter the appropriate data here on your own.

Subnet mask

INA>255.255.255.0

Programming numbers

Programming function keys

Begin as follows:




Press the corresponding softkey to select the desired menu.

Program keys	
	T400
function	New
macro	list


Information:

The »T400« menu is only available when you have connected an additional keyboard.

function:
Function keys (softkey »function«)
First select a function key and then confirm by pressing OK.

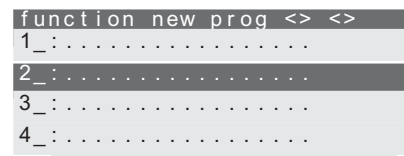

After that, you can select the function for the key (extension key, line key, etc.) Depending on the selected function, further input may be required, for example, inputting the number for a line key; confirm your input by pressing OK.

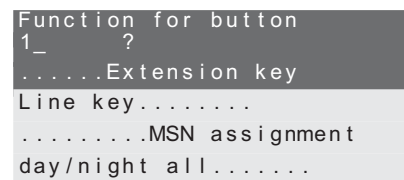

Function keys and further entries

function	Displays	Further entries
MSN assignment	»msn-assignment«	Index of numbers (MSN 1..9) that are to be transmitted.
Carrier/Provider prefix	»msn-assignment«	Telephone number index (MSN1 ... MSN-9) and code number of the desired provider (for example 01033).
Call filter	»Filter«	
Call rerouting	»Call rerout.«	Index der Call number (msn-1...msn-9), Call rerouting mode (1 - fixed, 2 - delayed, 3 - when busy) and call rerouting target.
Direct dial-in	»Direct cal«	
Headset	»headset«	
Auto-Answer	»Auto. Accept on/off«	Telephone number index (MSN1 ... MSN-9) for which calls are automatically answered.
Userecall flash button	»User on/off«	Telephone number index (MSN1 ... MSN-9) you wish to use for all further programmings..

macro:
Programming macro buttons (»macro« softkey)
Please select a function key first. First enter a name for that macro

(max. 20 characters. Then enter the separate macro commands.
A macro's command string is limited to 26 characters. Each command or button simulation consists of two characters. You can therefore only link a maximum of 13 commands together, or, for example, join 7 commands / key stroke simulations with a further 12 digits.

Commands and keys for macro programming

A macro consists of various commands, or call flash button strokes, that are compiled into one command sequence and stored under a defined direct dialing key. When this function key is pressed, the individual commands contained in the macro are executed one after the other.

The following commands are available for macro programming:

- »B« Initiating a call (same as lifting the handset)
- »D« Ending a call (same as replacing the handset)
- »ELSE« Alternative command, if a required condition (e. g. »IFLA« or »IFLB«) is not fulfilled.
- »IFLA« Execute this macro only when the LED for the first level is off (»IFLA«) or flashes (»IFLB«). If this condition is not fulfilled the procedure is discontinued, or resumed after the command »ELSE« (where available).
- »IFLB«
- »K« Keypad sequence; all of the following characters / digits are transmitted as a keypad sequence.
- »LA« Deactivate LED
- »LB« The LED flashes
- »LE« Activate LED
- »LZ« Activate LED for two seconds
- »n« Dummy number.
If a number is entered prior to execution of a macro (or for example, dialed from the telephone) this number is used in place of the dummy number in the macro.
- »P« Pause (1 second) in the command sequence (between two characters/commands)
- »RE« Re-establish the phone's idle state.
If there is an active connection at this phone, execution of this macro is canceled at this point.
- »SE« Activating the speaker (normal volume)
- »SA« Activating the speaker (low volume)
- »T« DTMF-Sequenz: all of the following characters / digits are transferred as DTMF dialing.
- »TS« Testing a connection.
If there is currently no connection active, or an outgoing connection can not be set up (for B. subscriber busy), execution of the macro is canceled at this point.

If you wish to incorporate a telephone key into a macro, press the corresponding key during macro programming (this is indicated, for example by » s5« in the display). All keys used for operating the telephone during macro programming (e. g. save, change entry position, delete entry or cancel) cannot be incorporated into the macro by simply actuating them, but need to be linked with the macro by means of the following commands.

- »c« Actuation of the C- button.
- »esc« Actuation of the ESC- button.
- »f« Actuation of the menu button.
- »« Actuation of the left arrow button.

- »OK« Actuation of the OK button.
- »« Actuation of the right arrow button.
- »R« Press the key two times to reach the second level for the function keys.

Key assignments for macro programming

Button	Press						
	1	2	3	4	5	6	7
1	1						
2 ABC	2	B	c				
3 DEF	3	D	ELSE	esc			
4 GHI	4	IFLA	IFLB				
5 JKL	5		K	LA	LB	LE	LZ
6 MNO	6	menu	N	ok			
7 PQRS	7		P	r	RE	SA	SE
8 TUV	8	T	TS				
9 WXYZ	9						
0	0						
*	*						
#	#						

Macro programming examples:

Function	Macro command string
Key programmed for a particular number (FOR EXAMPLE.: 012345 and activate LED for two seconds)	RE, B, 0, 1, 2, 3, 4, 5, LZ
Program an appointment reminder	RE, menu, s3, s5
Read new text messages (UUS1)	RE, , s6, s6, s2
Inhibiting the phone for all outbound calls »N«: Password for the telephone (Key for level 1, activate LED)	RE, menu, s5, s1, N, OK, s5, s4, LE, esc
Re-enabling the telephone for outbound calls »N«: Password for the telephone (key for level 2, deactivate LED)	RE, menu, s5, s1, N, OK, s5, s2, LA, esc
Add an entry to the telephone directory	RE, menu, s6, s2, s5
Activate/ de-activate the idle mode»OK« and LED display	RE, s5, IFLA, s5, ELSE, s2

Service

Name

Telephone name

You can assign a name (20 characters max.) to the telephone to provide it with unique identification within a PABX system. You will need the telephone name for example for configuring the telephone through the internal ISDN connection of a connected pabx. The default name entered is the telephone's serial number.

Begin as follows:

The screenshot shows a sequence of menu screens. The first screen has a 'Menu' button and a 'Name' field. The second screen shows the 'Name' field with the value '0000000923'. The third screen shows the 'Name' field with the value '0000000923' and a 'Name>' prompt.

Enter a name for the telephone (max. 20 characters) and confirm your entry by pressing Ok.

Device name
Name> 0000000923

SMS

Number for the SMS center

Information:

These numbers can be edited using »Extended Configuration« only. It is possible to display the numbers and change the TX server.

With this system telephone you can send and receive SMS messages (text messages) to/from other phones in a fixed-line network or to/from mobile phones (see page 32).

Information:

However, sending and receiving SMS messages is only possible, when this phone is connected to specific elmeg pabx systems. Please refer to the operating instructions for your PABX to determine whether SMS-features are provided with this particular telephone.

The number for the SMS service provider (max. three providers) must be stored in the telephone in order for you to send and receive SMSs with your telephone. Messages can be received using any of the three stored SMS servers, whereas transmitting of messages is carried out using only the server you have enabled for this. In the initial (default) settings for this telephone the number »0193010« is entered for the SMS center for Deutschen Telekom (German Telecom) and can be changed as described below.

Begin as follows:

The screenshot shows a sequence of menu screens. The first screen has a 'Menu' button and a 'SMS' field. The second screen shows the 'SMS' field with the value '0193010'. The third screen shows the 'SMS' field with the value '0193010' and a 'TX' field.

Select the SMS server or enter the number for your SMS service provider without the line access digit.
For example: »0193010«.
Confirm your entry with OK.

Message Service Centre numbers
1: 0193010 TX
2:
3:

Creating and sending SMS messages

You can input a text message using the keypad on the system telephone. A short message is restricted to 612 characters) (iInterlaced SMS). The characters entered will be split into maximally four SMS messages.

Version

Reading the firmware version

You can have the version and the model of your phone displayed so that you can determine, for example, which firmware version is available in your phone.

Begin as follows:



- ◀ ▶ The display shows information about your telephone.
- Ⓒ FOR EXAMPLE.: Firmware version, name, ... Press the arrow key to display further information. Press the C button to exit the menu.

```

Software-Identification
Type: xxxx V1.01
Time: 08/01/07 13:41
Module: V1.00
:V4.311 16 00 0D 0D 0
Name: Desk 25
    
```

Data

Reset - Restoring the default telephone settings

You can reset the telephone to its initial state using the procedure described below. All of the data that you have entered previously will be deleted. Or, you can delete only user-specific data such as: telephone directory entries, VIP destinations, SMS /UUS1 messages, data for the Answering machine module, the caller list and the redial list. Any function keys configured for these features will not be deleted.

If you have the T400 key expansion module connected to your telephone, all data associated with the key expansion module will be deleted when the procedures described below are executed.

Attention: Settings for the optional answering machine and any texts that have been stored will not be deleted. Please refer also to the instruction manual supplied with your answering machine.

Begin as follows:



- Press the softkey »ok« to reset the telephone to its initial state. If you do not wish to have the data deleted press the softkey »no«.

```

Sure to delete all?
OK, incl. AM
No
ok
User data only
    
```

When you press the corresponding softkey e.g. »ok« the telephone is reset to the default configuration. All data is deleted, the telephone starts new. This could take several seconds to complete.

```

29.05.03 07:41 →
Info -i-
Tel. drctry
VIP Quiet
    
```

Software

Downloading new firmware

»Funkwerk Enterprise Communications GmbH« provides a server PC which can be used for loading new firmware into your CS410 and CS410-U system telephones. In this case, the firmware is downloaded through the ISDN connection. Download can take 12 minutes approximately, depending on the size of the firmware file. Please note that there is a charge for loading firmware via an external ISDN connection.

With the IP-S400 you can use the Professional Configurator (WIN-Tools for the pabx) under »System telephones«, »Indirect software download« to trigger a manual firmware download. In the Professional Configurator you can enter the Internet address for the firmware download. For this, no keys need to be pressed on the system telephone.

Information:

For more information about firmware download, refer to the »Firmware Download IP« description on your CD.

- Do not press any keys (unless prompted to do so) or plug in or unplug any connectors while data transfer is in progress. If the connecting line is interrupted during a download, restart the download program and proceed as described previously.
- Once the new firmware has been loaded completely the telephone performs a RESET and is then available for use again.
- In some circumstances all of the data in your phone may be deleted after a firmware download. If this is the case, a notice is given prior to starting the download. Prior to downloading, save all of your telephone data (configuration, phone directory) to your PC.

Downloading new firmware using the telephone's USB port

You can load the newest firmware versions into your telephone via the phone's PC interface and using the WIN-Tools CD ROM supplied with the system.

- Connect the phone to the PC.
- Load the new firmware into your PC (e. g. from the Internet).
- Launch the download manager of the WIN-Tools.
- In the field »Type of connection« select the »USB« port.
- Go to »File«, »Open« and select the directory where the new firmware is stored.
- In the field »Status« click »Start Download« to begin downloading the new firmware.

Downloading new firmware from the server PC

»Funkwerk Enterprise Communications GmbH« provides a server PC which can be used for loading new firmware into your telephone. In this case, the firmware is downloaded through the ISDN connection. Download can take 12 minutes approximately, depending on the size of the firmware file. Please note that there is a charge for loading firmware via an external ISDN connection.

You can use the Professional Configurator under »System telephones«, »Indirect software download« to trigger a manual firmware download. For this, no keys need to be pressed on the system telephone.

Information:

Important notice for export variants:

Please ask your specialized dealer/distributor for the access number of the download server for your country!

Download server	Call number
Funkwerk server	++49-(0)5171-901190

Initiating download of new firmware on the phone:

Begin as follows:



The telephone then restarts from the BIOS.

Press the »Update« softkey.



Enter the line access digit to obtain external line access, and then the number for the download server.

In this example: »005171901190«.

If you are using your telephone with a PABX system for which automatic exchange line access is active, enter the number for the download server without the line access digit.

```
Cx410-bios 1.04 by ps
UPDATE
INFO
```

```
Cx410-bios 1.04 by ps
Firmware Update
Please dial
005171901190
Abort
```

Information:

To cancel a download already in progress press the »Abort« softkey or ESC.

In some circumstances all of the data in your phone may be deleted after a firmware download. If this is the case, a notice is given prior to starting the download: »All data will be deleted Continue?«. The firmware download is started only after you have confirmed this prompt by pressing »ok«. If the data for the telephone are not deleted during the download, the download is started without first displaying the above prompt.

Telephone BIOS

This telephone is equipped with a BIOS (basic functions) in English. The BIOS functions also remain available even if the firmware of the telephone does not operate properly, or if new firmware was not loaded completely (e. g. if the PC crashed while loading the firmware).

The following functions are available in the telephone's BIOS

- All phone calls are signaled. No number (MSN) has been entered in the telephone.
- Dialing of outgoing calls is possible after lifting the handset (no call preparation, no open listening or hands-free calling).
- Loading new firmware via the phone's PC port or via the ISDN connection.

Downloading new firmware via the PC port

To load new firmware in the BIOS of your telephone via the PC port, proceed as described on page 75 of these operating instructions.

Downloading new firmware via the ISDN connection

You are shown the BIOS menu for the telephone. If you wish to load new firmware via the ISDN connection, press the »Update« softkey.

```
Cx410-bios 1.13 by ps
Update
Info
```


Now proceed as described on page 76 of these operating instructions.

Information:

Attention: The settings for the »Set« softkey are used for service and diagnosis. Any settings you may make or modify in this menu will affect the overall functionality of your telephone. In some cases the telephone may not be able to be used if these settings are changed.

Country


Country-specific settings

Certain specific parameters need to be set if the telephone is to be used in a country other than the country configured as default.

This includes for example setting the language, the currency and certain default specific parameters for a country's ISDN network.


Check as described below whether you need to set country-specific parameters for the country in which the telephone is to be used.

Begin as follows:



◀ ▶ Press the arrow keys to view the countries, for which specific settings are available.


● Press the softkey for the desired country. e.g. »UK«.

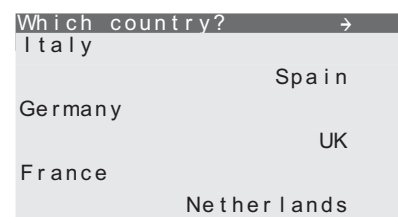

Information:

The system telephone is then restarted!

All country-specific settings take effect immediately.
The telephone data will not be deleted.

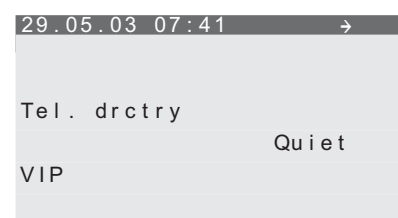

Telephone and PC

Information:

The CS400 / CS400xt system telephone does not have a USB port! Functions can therefore not be used via USB.

CTI / TAPI using the phone's USB port

The abbreviations CTI and TAPI denote the standard interface for Windows telephony applications from Microsoft. Telephones and computers can work hand in hand via this interface.

CTI: Computer Telephony Integration

TAPI: Telephony Application Programming Interface

This allows you to dial directly from TAPI-compatible Windows programs, and the calls can be used by the software. Consequently, setting up a connection via TAPI is considerably faster than with normal calling. TAPI, with its standard Microsoft interface, has the advantage that it is already supported by a large number of programs and this number is growing all the time.

Information:

The TAPI functions of the telephone are available immediately after being connected to the PC and does not require any additional activation procedures to be performed at the telephone.

CAPI using the telephone's USB port

You do not require an additional ISDN card in your PC. The phone is equipped with an integrated USB port for connection to the PC. Based on the programs and drivers you have installed, you can use the telephone, for example to surf the Internet conduct data exchange, send/receive fax messages, or implement an answering machine via the PC.

CAPI: Common Application Programming Interface

- Only one B channel is available for all applications, to ensure that the telephone can be reached at all times. The applications being used can use this B channel one after the other.
- Do not use the same MSN in these PC applications as are used in the telephone.
- If a CAPI application is active on your PC and using the available B channel this is indicated in the display of the telephone by »ONLINE«. Only one B channel is then available for telephony while this application is in use.

Fax and data services (not included in the delivery)

Using a fax program you can send/receive fax messages from/with a number of different applications. Using a data transfer / file transfer program you can transfer data from one PC to another, or receive data from different PCs. You must have at least the following drivers installed to use this and other applications with your telephone:

- USB- and CAPI drivers for the telephone

Internet access

Surf the Internet using your telephone. Use the software packages furnished by your service provider (for example T-Online, AOL) or the data transfer network of your Windows operating system for this. You must have at least the following drivers installed to use for telephone to surf the Internet:

- USB- and CAPI drivers for the telephone
- NDISWAN driver (required only for connection to the Internet via the Windows dial-up network)

Audio applications using the phone's audio jacks

The telephone is equipped with an input (2) and an output (3) for audio signals. Both these ports have a 3.5 mm stereo socket. When using the optional answering machine module, you can connect the telephone via these ports to the PC sound card in order to upload announcements into the phone or save recorded messages on the PC.

You can also use specific telephone features with the Audio-Out output (see page 52).

Contents of the WIN-Tools CD-ROM

In these operating instructions we would like to give you a brief summary of the software included in the scope of supply for the system. The software programs themselves are not described in these instructions. Should you have any questions or problems while you are using the programs, you can also refer to the online help function of the various applications for assistance. All of the programs used are provided with comprehensive online help.

Programs for telephone configuration (WIN-Tools)

- **Professional Configurator:**
Setting and configuration of the phone's individual features are done in the configuration process. You can set up MSN extension numbers or program VIP keys and function keys. You can also configure the phone's displays, set the volume of various signals, select dialing options (when the phone is connected to a PABX) or set the parameters for dial ranges and charge logging. The Professional Configurator is also used for programming an optional answering machine or the optional keyboard extensions.
- **Telephone Directory Manager:**
Use the phone directory manager to create new entries for the phone directory (see page 26) or assign a special dial tone (VIP dial tone) to individual numbers. With the import / export function you can also import data from other programs or export data for further processing.
- **Download Manager:**
Use this program for loading new firmware for the telephone with your PC. A new firmware is loaded via the phone's PC port.
- **Sound Manager:**
You can use the sound manager to create your own call signaling melodies at the PC and then load these melodies into your telephone.

Information:

On completion of data exchange, the telephone undergoes an internal reorganization (of phone directory data for example). This process takes place automatically and may require a few minutes. During this time, certain telephone functions will not be available for use (e. g. phone directory).

Application programs

- **Adobe Acrobat Reader**
Program for viewing and printing PDF documents.

Drivers

- **CAPI-driver** (Common ISDN Application Programming Interface)
Links the telephone to programs that provide data communication functions.
For example CAPI software (not included in the package)
- **NDISWAN-driver** (NDIS - Network Device Interface Specification / WAN - Wide Area Networking)
Integration of the telephone into the PC as a special ISDN network card
e.g. Connection to the Internet via the Windows dial-up network
- **TAPI driver** (Telephony Application Programmer's Interface)
Interfacing to programs that provide computer-aided telephony.
e.g. Windows dialing assistant, CTI software (not included in the package)
- **USB driver** (Universal Serial Bus)
Recognition and control of the phone after connecting to the USB port of the PC.
For g. WIN-Tools programs

Important note for installation of the CAPI drivers:

Before installing the new drivers be sure to remove any existing CAPI drivers in your system (such as the drivers for an installed ISDN card), as Windows only supports one installed CAPI.

Refer to the operating instructions for the device concerned, or for the operating system, for details on removing drivers.

Information:

In some special circumstances it may be necessary to also physically remove the ISDN card from your PC in addition to (virtually) removing the drivers.

Installing the programs from CD-ROM

Information:

At present, only Microsoft Windows operating systems are supported for connection of a PC to the telephone via the USB port.

PC requirements:

- IBM or 100% compatible PC
- Pentium or comparable processor, min. 133 MHz clock rate
- min. 32 MB RAM
- CD ROM drive
- Free USB-port
- Windows 98SE / ME / 2000 / XP operating system
- Min. 80 MB free hard disk space for installation

Installation sequence

- Start up your PC.
- Insert the CD ROM supplied with the system in the CD ROM drive of your PC.
- Wait a moment until the program starts automatically. If the autostart option is not activated in your PC you can start the file »setup. exe« directly from the main directory of the CD using Windows Explorer (double click on the file), or using the option »Run« in the Windows start menu.
- The welcome screen for the CD is displayed after you start the file.
- Install the programs and drivers in the order given:
 - CAPI driver
 - WIN-Tools programs
 - TAPI driver
 - CTI software (not included in the package)
 - CAPI software (not included in the package)
 - NDISWAN driver
- Connect the telephone to the PC's USB port as described on page 7. The telephone is automatically detected by the PC.

Information:

Installation of a device driver is started automatically the first time you connect the telephone to the PC. The device driver is located in the root directory of the CD-ROM. Follow the instructions displayed on the monitor.

- You can then use your phone together with the installed PC programs.


Default telephone settings

- The serial number is entered as the telephone name.
- Display language: deutsch
- Country-specific settings:deutsch
- No MSN extension numbers are stored.
Ringer melody volume: Level 3, ringer melody: Number 1; No call forwarding or deflection numbers, no MSN extension name, MSN cost account deactivated, PIN for the MSN extension: 0000, MSN enabled for dialing
- No entries are stored in the caller / memo list and the redial list.
- No entries are stored in telephone directory or the VIP memory.
- No function keys programmed (direct dial, functions, macros).
- 10 permanently stored ringer melodies. 10 storage places for additional melodies.
- No UUS1 text messages are stored.
Reception of internal (pabx) and external text messages is possible.
No automatic relaying of text messages with a call.
- No SMS text messages are stored. Number for the SMS center: 0193010 (SMS server of Deutsche Telekom AG>
- Silent signalling for the telephone is switched off.
- Display contrast: Level 4
- Speaker volume: Level 4
- Handset volume: Level 2
- Acknowledgement signals and error tones are active.
- Appointment reminder volume: Level 3
- Silent signalling tone volume: Level 3
- Call waiting tone volume: Level 3, call waiting tone repeat feature is active
- No output of audio signals over the Audio-Out port.
- Numbers are identified with incoming and outgoing connections (CLIP / COLP).
- Telephone number and costs are displayed. The call duration is shown when no cost data are available.
- Display of information after completion of a call (e. g. duration)
- Cost data: Tariff 0.062 and currency POUND
- Call wait. protect. is switched off.
- Dates are switched off. No appointment data stored.
Date: 11. 11. 02 / Time: 11:11
- Auto-Answer time: immediately
- Headset use is not configured. Headset type: Standard
- Dialing status during an ongoing call: DTMF-dialing
- Microphone switched off after handsfree dialing.
- Call filter switched off, no filter number stored.


- Automatic call switched off, no automatic dial-in number stored.
- PIN for the telephone: 0000
- Dial ranges switched off, no restricted or unrestricted numbers stored.
- Menu access is not PIN-protected.
- PABX type: 0
- Internal number length for the pabx: 4
- Parking code: 55

Menu of the Telephone


Menu »Configuration«

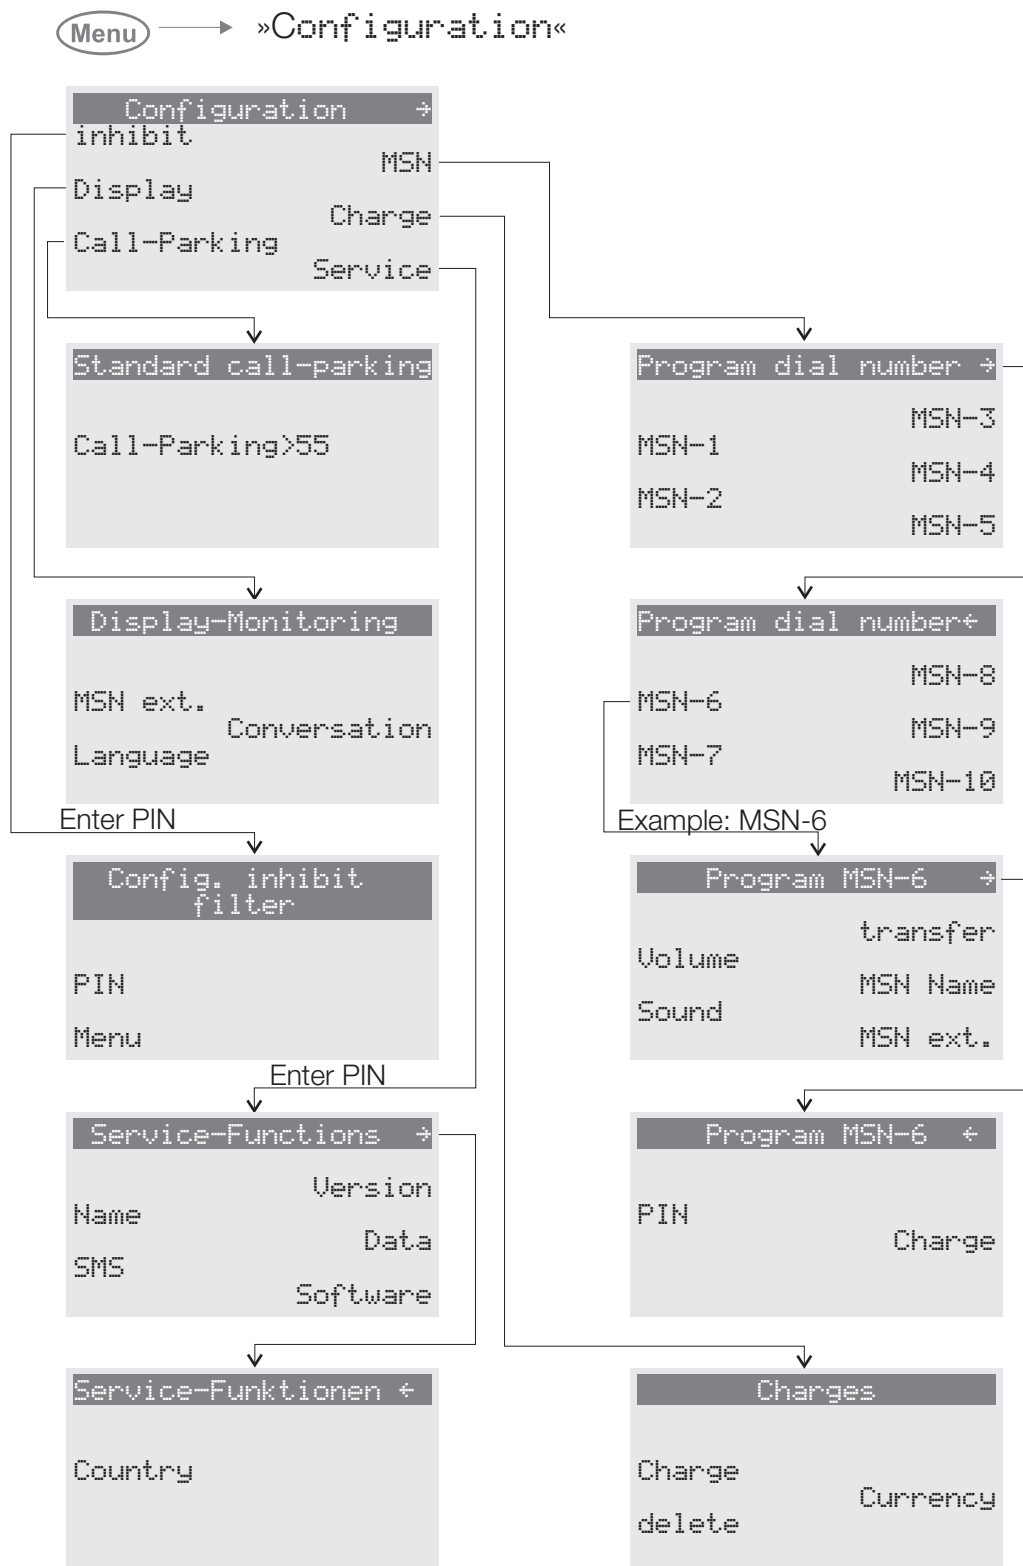


Menu»Acoustic«

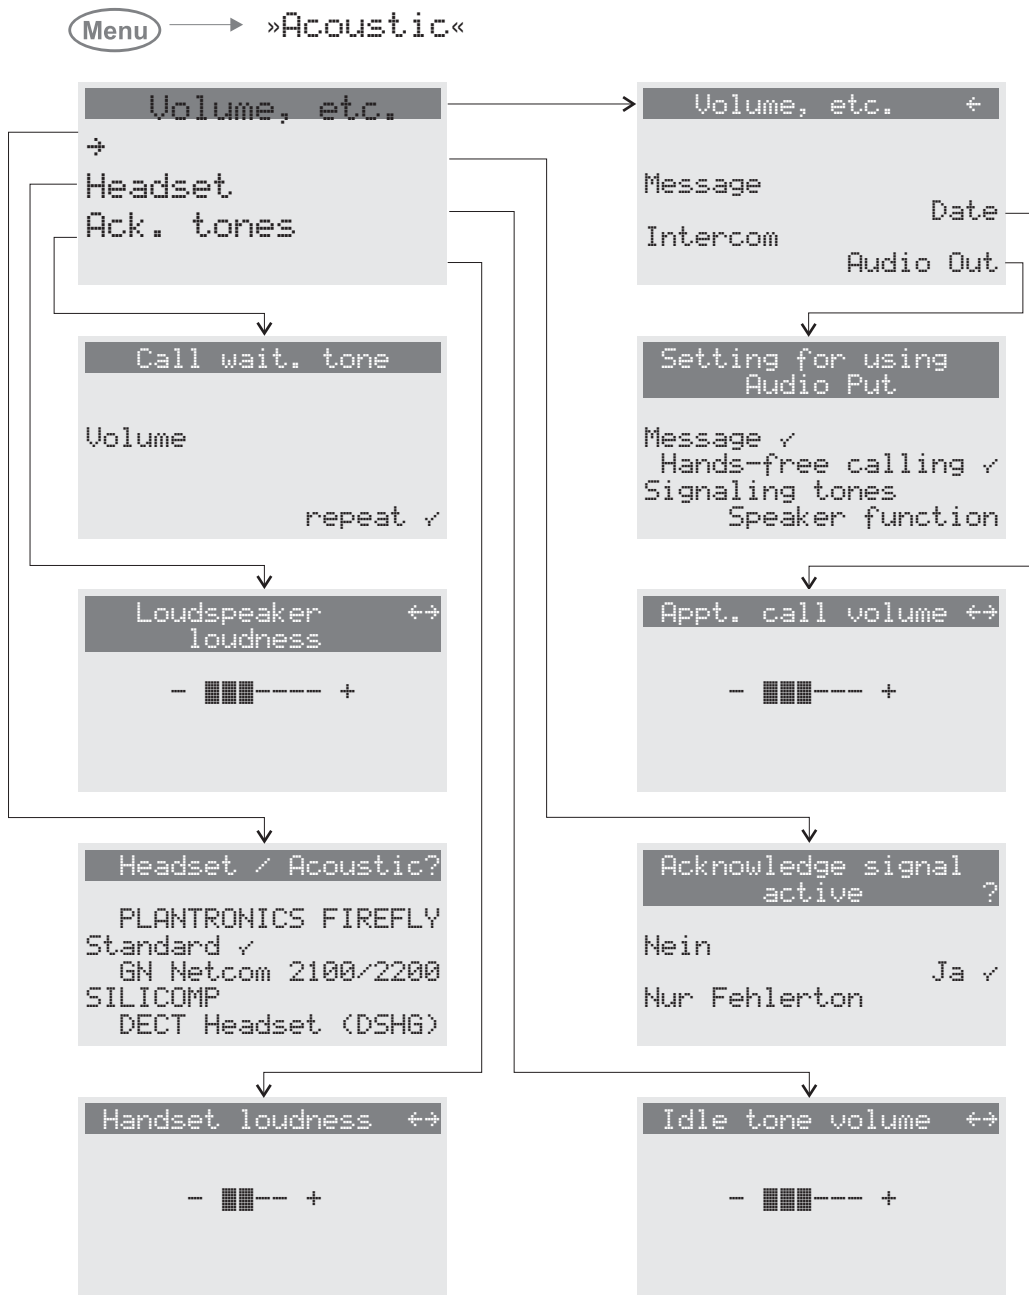

Menu »Settings«

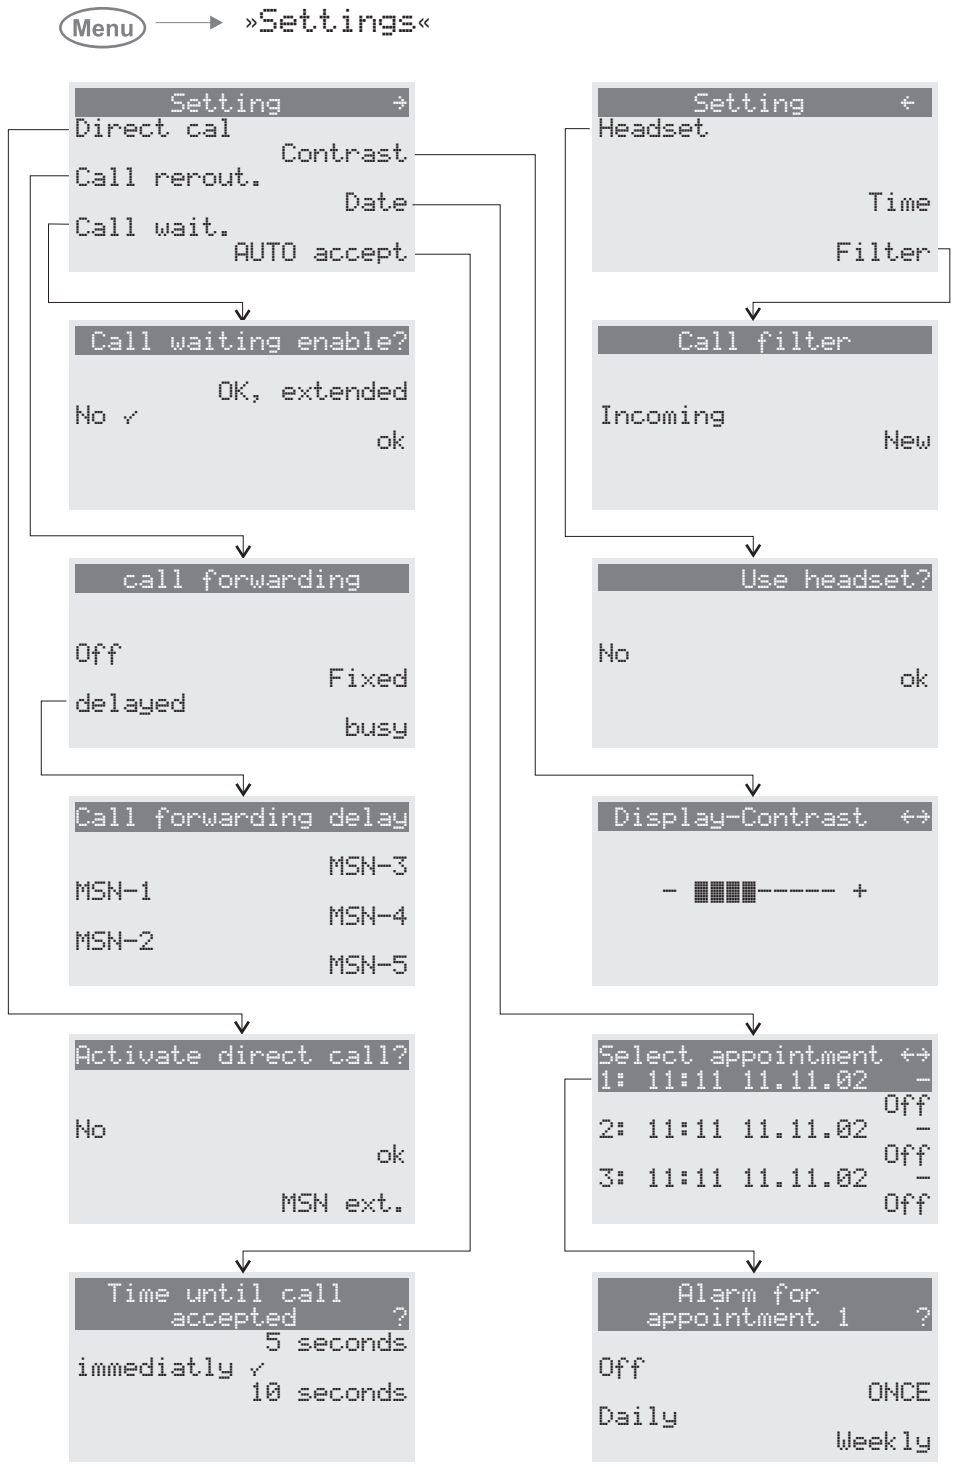

Menu »Program nos.«

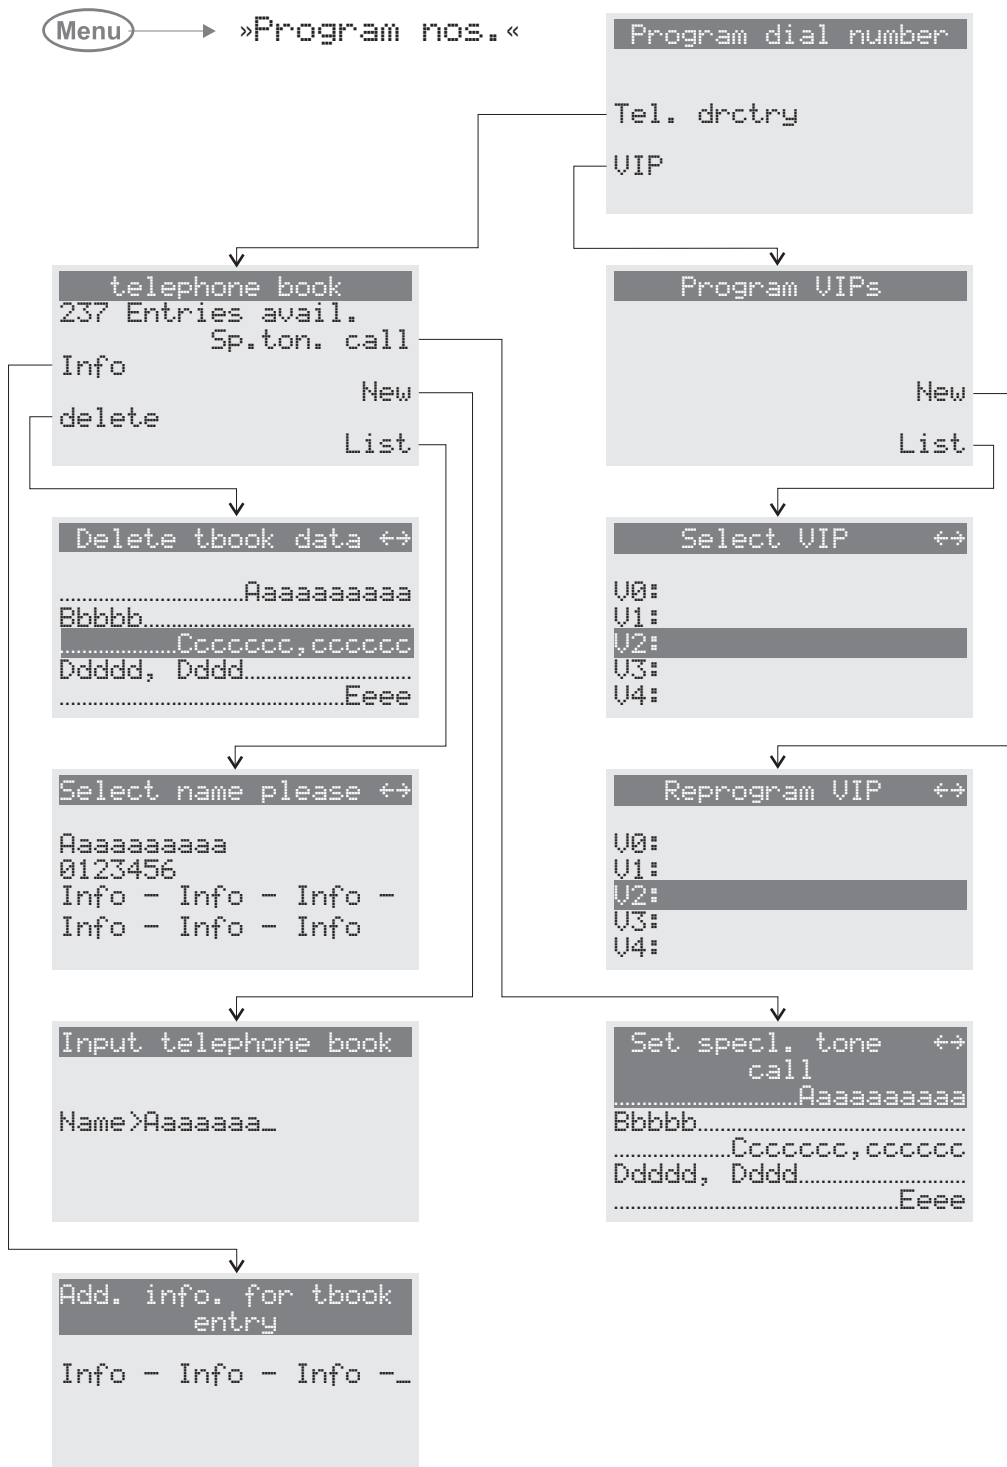

Technical specifications

Dimensions (L x W x H): approx. 255 x 180 x 100 mm

Weight: approx. 0.8 kg

Temperature range: +5°C ... +40°C

Operation: -25°C ... +70°C

Storage:

ISDN port (CS410, CS400)

Connection cord length: approx. 6 meters

ISDN connection: DSS1 protocol, point-to-multipoint access

Channel structure: B + B + D

Power consumption: <=1 Watt

Up0-Connection (CS410-U)

Connection cord length: approx. 6 meters

Up0-Connection: DSS1 protocol, point-to-point

Channel structure: B + B + D

Power consumption: <=1 Watt

Output: ISDN port, DSS1 protocol, Point-to-multipoint connection

Power at output: max. 1 Watt

USB port

Length of USB connection cord: approx. 3 meters

Terminal: Self powered terminal

Speed rating: Full Speed

USB-standard: 1.1

Audio connections

PC-audio cable length: approx. 2.5 m, 3.5 mm stereo plug

Ethernet-port

Ethernet connection cord: Cat.5 approx. 3 meters

Index

A

- Accepting a call 16
 - waiting call. 24
- Acknowledgement signals 14
 - setting 50
- Acoustic 49-61
- Adding telephone book entries 27
- Additional keyboard 3
- Adobe Acrobat Reader 79
- Announcement 20
- Answering machine 3
 - PIN for remote control. 60
- Answering machine LED. 14
- Answering machine module. 3
- Assignment for the headset jack 6-7
- Audio applications 78
- Audio in / Audio out 7
- Audio in / Audio Out 78
- Audio-In 52
- Audio-In over the speaker 52
- Audio-Out 52
- Auto-Answer. 44,57
- Automatic answer. 57
- Automatic redialing. 18
 - deactivate 19
 - suspend 19
- Automatic use of a headset. 57
- Automatical recall. 21
 - on no answer. 22
- Automatical recalll
 - to busy subscriber. 22

B

- Boss/sec.-function. 44
- Broker's call 25

- Buttons 11-14

C

- Call Deflection. 17
- Call filter 44,58
 - programming 59
 - programming filter numbers. 58
- Call forwarding 54
- Call number (msn)
 - charge limitation 39
- Call rerouting 44,54
- Call rerouting in Switzerland 55
- Call signaling 14
- Call switching 24
- Call waiting 24
- Call waiting configuration
 - call waiting tone volume 49
 - repetition of the call waiting tone 49
- Call waiting tone repetition 49
- Caller and memo list
 - view 30
- Caller list 29
- Caller/memo list
 - dialing a number 16
- Call-LED 14
- Call-Parking programming 63
- Cancelling calling line number identification
 - for the next call 17
- CAPI using the USB port. 78
- CAPI-driver 79
- CCBS (recall to busy subscriber) 22
- CCNR (Completion of call on no answer) 22
- CD-ROM contents 79
 - Adobe Acrobat Reader 79
 - drivers 79
 - setting up the telephone 79

- Changing the label 10
 - Charge display 40-41
 - setting 62
 - Cleaning the telephone. 4
 - Completion of call on busy, automatic 21
 - Completion of call to busy subscriber (CCBS) 22
 - Conference. 25
 - Configuration 48-52,60-69
 - Configuration, extended 48
 - Connecting the audio jacks 7
 - Connecting the cord 5
 - Connecting the PC connection cable (USB) 7
 - Connecting the telephone 4
 - headset. 6
 - PC (USB / Audio) 7
 - Connecting the telephone to the S0. 5
 - Connecting the telephone to the Up0 5
 - Connection keys. 42
 - Connection to a pabx 63
 - Contents of the CD-ROM 79
 - Adobe Acrobat Reader 79
 - drivers 79
 - telephone setup 79
 - Controlling costs
 - inhibiting an extension number for outgoing calls
39
 - Conversation
 - call switching / transfer 24
 - parking 22
 - Country-specific settings. 77
 - CS410 2
 - CS410-U 2
 - CTI using the USB port. 78
- D**
- Daily appointment call 56
 - Data. 74
 - Data transfer (File Transfer) 78
 - Day/night mode 43
 - Default telephone settings 81-82
 - reset. 74
 - Deflecting a call 17
 - Deleting telephone book entries. 27
 - DHCP Server. 68
 - Direct call 53
 - Direct dial-in 44
 - PIN to deactivate 60
 - Direct dial-in using function keys 16
 - Display 12
 - setting the contrast 56
 - setting the language 11,62
 - Display language. 11,62
 - Displays during a call
 - viewing. 40
 - Displays during an ongoing call 40-41
 - setting 62
 - Download Manager. 79
 - Downloading new firmware 74
 - using the ISDN-connection 75
 - using the USB port 75
 - Drivers on the CD-ROM 79
 - Dtmf dialing. 24
- E**
- Editing telephone book entries 27
 - Editing VIP entries 28
 - Electrostatic charges 4
 - Entering a memo 32
 - Entering a name for an extension number 65
 - Entering letters 13
 - Extended configuration 48
 - Extended last number redial 17
 - Extension key 42
 - Extension key for an answering machine. 44

- Extension number (msn)
 - programming a specific PIN 66
 - setting the volume. 65
- Extension number (MSN) 64
 - defining for the next call 42
 - entering or viewing 64
 - programming a melody (sound). 65
- Extensions. 3
 - additional keyboard 3
 - Additional keyboard 3
 - answering machine module 3
 - Up0/S0-module 3
- F**
- Firmware download 74
- Firmware version of the telephone 73
- Function keys 14,42-46
 - call filter 44
 - announcement. 43
 - auto-answer 44
 - boss/sec- button 44
 - call rerouting. 44
 - day/ night mode 43
 - direct dial / DTMF-/ keypad sequences. . . 42
 - direct dial-in 44
 - extension key 42
 - Headset on/off 44
 - intercom 44
 - intercom on/off 44
 - line key 42
 - log-on/off. 43
 - macro functions 45
 - message on/off. 43
 - MSN assignment 42
 - programming 46
 - router key 45
 - status info 45
 - team key 43
 - trunk group button 42
 - user on/off 44
 - Voice Mail-Button. 44
- G**
- Gateway 68
- H**
- Hands free Calling 19
- Headset. 6,20
 - connecting 6
 - assignment for the jack 6-7
 - automatic use 57
 - settings. 7
- Headset ON/OFF 44
- I**
- Idle tone 37,50
- Information text for phone book entries 26
- Inhibit 60
- Input mode for entering letters 13
- Inquiry Call 24
- Installation sequence from the CD ROM 80
- Intercom 21,44
- Intercom inhibiting filter. 44
- Intercom notice tone 20-21
- Internet access. 78
- IP-S400 configuration 68
- IP-S400 setup 66-69
- K**
- Keypad 23
- L**
- LED for calls and AM 14
- LEDs 14
- Letters 13

- Line key 42
- Loading firmware
 - using the ISDN-connection 75
 - using the PC-connection 75
- Loading new firmware 74
 - from the telephone BIOS 76
 - using the ISDN-connection 75
 - using the USB port 75
- Log-on (team) 43
- M**
- Macro. 70
- Macro functions 45,72
- Malicious call identification (MCID)
 - after a call 23
 - during an ongoing call 23
- MCID (Tracing). 23
- Message Waiting Indication (MWI) 29
- Memo list 29-31
- Menu access protected by PIN. 61
- Message 43
- Message inhibiting filter 43
- Microphone on/off 19
- Monitoring charges
 - charge limitation 39
- Monitoring costs 37-41
- Mounting the telephone feet 4
- MSN (call number)
 - charge limitation 39
- MSN (extension number) 64
 - assigning names 65
 - defining for the next call 42
 - enable/inhibit for outgoing calls. 39
 - entering or viewing 64
 - programming a melody (sound). 65
 - programming a specific PIN 66
 - setting the volume. 65
- MSN assignment 17
 - for phone book entries 26
- Muting 19
- MWI 12,29
- N**
- Name 73
- NDISWAN-driver 79
- Negative acknowledgement signal 14
- Netmask 69
- Notice tone (announcement and Intercom) . . 51
- NTBA. 25
- Number for the SMS center 73
- O**
- One-time appointment call 56
- Open listening 19
- Operation 57
- Own IP-address 68
- P**
- PABX. 63
 - function keys. 42-46
 - system menu. 47
- Parking a call 22
- PC-requirements 80
- Pictographs 10
- PIN-protection for telephone menus 61
- Placing the telephone 4
- Pocket money account 39
- Positive acknowledgement signal 14
- Professional Configurator 79
- Programming a melody (sound) 65
- Programming a sound (melody) 65
- Programming a specific PIN for an extension number
66
- Programming a telephone PIN 60-61
- Programming an automatic call number 53

- Programming appointment reminders 56
- Programming call number display 41
- Programming call waiting mode 55
- Programming charge limitations 39
- Programming filter numbers 58
- Programming numbers. 70-72
- Programming telephone numbers 28
- Programming VIP entries 28
- Programs on the CD-ROM. 79
- Protection against electrostatic charges 4

- R**
- Recording button 45
- Redialing 17-18
 - automatic. 18
 - extended 17
- Rejecting a call. 16
- Requirements for the PC 80
- Reset 74
- Router button 45

- S**
- Safety notes 3-6
- Sec.-function. 44
- Send/ receive faxes 78
- Setting calling line identification
 - for the next call 17
 - for the next call 17
- Setting the currency. 39
- Setting the display contrast 56
- Setting the handset volume 50
- Setting the headset type 49
- Setting the park-code 63
- Setting the ringer melody (sound)
 - at at pabx. 14
- Setting the speaker volume. 49
- Setting the tariff factor 39

- Setting the volume 52
 - Appointment call 52
 - call waiting tone 49
 - handset 50
 - melody 65
 - silent signalling 50
 - speaker 49
- Settings 53-59
- Settings, country-specific. 77
- Silent signalling 37
 - notice tone volume 50
- SMS
 - viewing. 34
- SMS / UUS1 messages 29
- SMS center. 73
- SMS messages 32-36
- SMS text message
 - error during transmission 36
 - error while receiving 37
- SMS text messages
 - creating and sending 33,73
 - creatng and sending 73
- Software 74
- Sound Manager 65,79
- Special dial tone for telephone directory . . 26-27
- Special dial tone for telephone directory entries 27
- Specifying the outgoing number. 17
 - for phone book entries 26
- Starting a call 15
 - dialing from the caller/memo list 16
 - dialing from the telephone directory 15
 - dialing from the VIP memory 16
 - direct dial-in using function keys 16
 - with fixed extension number (MSN) 17
 - without calling line identification (CLIR). . . 17
- Status info 45
- Status info button 45

- Status LED 12
- Suppressing calling line number identification
 - for the next call 17
- Suppressing the calling line 41
- Switching call modes 43
- Switzerland, call rerouting 55
- System menu when connected to a pabx 47
- System parked inquiry 43,45

- T**
- TAPI driver 79
- TAPI using the USB port 78
- Team keys 43
- Team log-on/log-off 43
- Team log-on/off 43
- Technical specifications 87-88
- Telephone BIOS 76
- Telephone directory. 26-27
 - adding an entry 27
 - deleting an entry. 27
 - dial call number 15
 - editing an entry 27
 - information text for an entry. 26
 - outgoing number for an entry 26
 - special dial tone (VIP-tone) 27
- Telephone directory for the PABX 15
- Telephone Directory Manager. 79
- Telephone name. 73
- Text messages 32-36
 - configuring the reception mode (UUS1 only) 36
 - creating and sending 33
 - viewing. 34
 - save (UUS1 only) 35
- Tone dialing 24
- Tracing (MCID). 23
- Transferring a call. 24
- Transferring a call to a busy subscriber. 24
- Trunk group button. 42

- U**
- Unpacking and placing the telephone 4
- Unpacking the telephone 4
- Up0/S0-module. 3
- USB driver 79
- User on/off button 44
- UUS1 Inhibiting filter 29
- UUS1 messages
 - viewing. 34
- UUS1 text messages. 32-36
 - configuring the reception mode. 36
 - creating and sending 33
 - automatic sending (UUS1 only) 36
 - save 35

- V**
- Version. 73
- Viewing and deleting costs. 38
 - last call 38
 - specific extension numbers (MSN) 38
 - total costs 38
- VIP-Memory. 28
 - dial call number 16
 - editing an entry 28
 - programming an entry 28
- Voice Mail 44
- Voice Mail key. 45
- Voice Mail-Button 44

- W**
- Weekly appointment call. 56
- WIN-Tools on the CD-ROM. 79

Brief description of functions

Room inquiry									
					Dial call number				
Broker's call									
							Connection-1... Connection-4		
Conference									
					Dial call number		Conference		
Call transfer with prior notice									
						Dial call number		transfer	
Park									
			park			Enter parking code			
Unparking									
			unpark			Enter parking code			
Call forwarding									
			transfer			Dial call number			
Extended last number redial									
			or						
Search call number			Search call number						
Recall to busy subscriber									
			Subscriber busy		Clbckbusy				
Selection of outgoing numbers (MSN)									
						MSN		MSN-1... MSN-10	
Dial call number									
Activate call forwarding									
Setting		Call re- rout.		delayed busy Fixed		MSN-1... MSN-10		Dial call number	

Deactivating call rerouting



Silent signalling



Dialing from caller list, telephone directory or short dialing memory



Funkwerk: The Perfect Match.

V O I C E , D A T A , S E C U R I T Y .

Funkwerk Enterprise Communications GmbH
Südwestpark 94
D-90449 Nürnberg

For information on support and service offerings please visit our Website
at: www.funkwerk-ec.com

There, you will find a Service / Support area.
Subject to modifications

Ausgabe 4 / 010109